
FRONT CLIMATE CONTROL

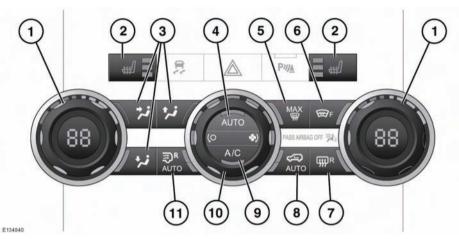

- Temperature controls: Individual for driver/passenger settings.
- 2. Seat heaters:
 - Press once to turn on high, twice to turn on medium, three to turn on low and a fourth time to turn off.
- 3. Air distribution buttons:
 - Windscreen and side window vents.
 - · Face level vents.
 - Foot level vents.

Note: More than one setting may be selected at a time to achieve the desired distribution.

- **4.** Auto mode: For fully automatic operation.
- 5. Maximum defrost mode.
- **6.** Heated front windscreen: Will deactivate after a predetermined length of time.
- 7. Heated rear screen: Will deactivate after a predetermined length of time.
 - Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

- 8. Recirculation:
 - Press for timed recirculation.

Note: The time is automatically determined to prevent glass mist. Ambient air temperature and status of the air conditioning system will affect the time period.

 Press and hold for latched (continuous) recirculation.

Note: Prolonged continuous use will increase the risk of glass mist.

- To cancel recirculation, press the button again.
- Air conditioning on/off: With air conditioning off, the system operates in economy mode, improving fuel economy.

Note: Using the system without air conditioning for long periods can cause the windows to mist.

- 10. Blower control:
 - Rotate to adjust blower speed.
 - Rotate fully counter-clockwise to turn the climate control system off.