


Note: The head restraints should be raised to the correct position before the seats are used by a passenger.

ACCESS POSITION (7 seat vehicle)

⚠ The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the backrest to fall forwards suddenly, causing injury.

To access the third row of seats by this method, the headrest on the second row seat must first be fully lowered.

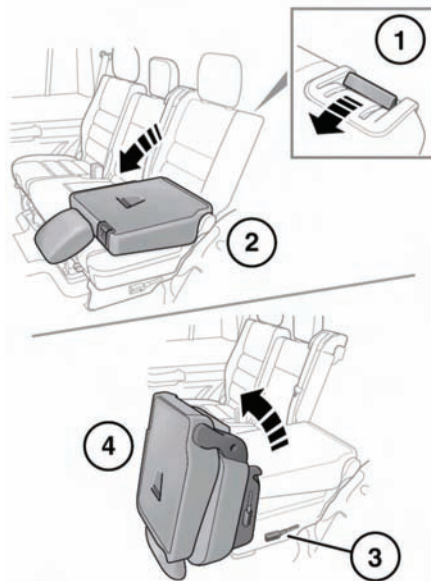

E134918

1. Pull the backrest lever forwards.
2. Lower the backrest into the table fold position.
3. Pull the access lever on the side of the seat.
4. Tilt the seat forwards.

To return the seat to the upright position, lower the seat until the access lever re-engages, then pull the backrest lever and return the backrest to the upright position.

Note: A second row seat cannot be moved directly from the loadspace position to the access position. The backrest must first be returned to the table fold position.

- ⚠ When returning the seat from the access position, ensure nothing is trapped beneath the returning seat.**
- ⚠ The seat position should be checked and physically tested to ensure that the cushions and backrest are secure before driving. If the backrests are not fully locked in place, red markers will be visible around the backrest levers.**

THIRD ROW SEATS (7 seat vehicle)

- ⚠ Ensure nothing has been left under the third row seat, or in the footwell when folding down the seat, as this could cause damage to the item or the seat.**
- ⚠ Beware of trapping fingers when raising and lowering the third row seat.**
- ⓘ Do not attempt to raise the third row seats when the loadspace cover is stowed behind the second row seats. Damage to the loadspace cover or the seats may result.**

It is possible to fold the third row seats flat.