
INTERIOR LIGHTS

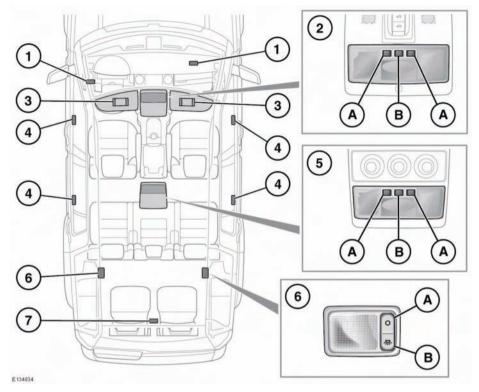

- **1.** Footwell lamps: Automatically illuminate when the doors are opened.
- 2. Map reading/interior lamps:
 - A. Map light controls (on/off).
 - **B.** Main interior lamp control (on/off/Auto). To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.
- **3.** Sun visor lamps: Switch on or off as required using the switch.
- **4.** Puddle lamps: Automatically illuminate when the doors are opened.

- **5.** Rear interior lamp control:
 - A. Map light controls (on/off).
 - **B.** Main interior lamp control (on/off/Auto). To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.
- **6.** Third row seating courtesy lamps:
 - A. Press to turn off.
 - B. Press to turn on.
- Loadspace interior lamp: Automatically illuminates when the tailgate is opened.