
RADIO CONTROLS

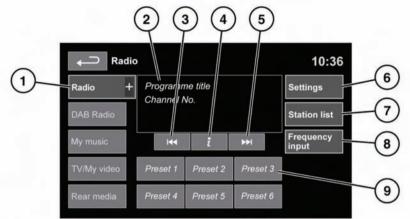

E135965

 Radio: Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.

The waveband selection box will close automatically after 5 seconds without use.

- 2. Displays information about the current station.
- 3. Seek down:
 - Short touch to auto seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
- **4.** Information. More information from the broadcasting station.
- **5.** Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change

- the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
- Settings: Touch to view and activate/deactivate the following features: RDS, Traffic, News, AF and REG. See 124, RADIO DATA SYSTEM (RDS).
- Station list (FM only): Select to view a list
 of available stations on the waveband. The
 list can be sorted by Frequency, Name or
 PTY (pop, news, sport etc.) by selecting
 the appropriate soft key. Touch to select
 the chosen station.

If the stations are sorted by category, touch the chosen category to view and select a corresponding station.

8. Frequency input: Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select OK or wait for 2 seconds to tune to the entered frequency.