


RADIO CONTROLS

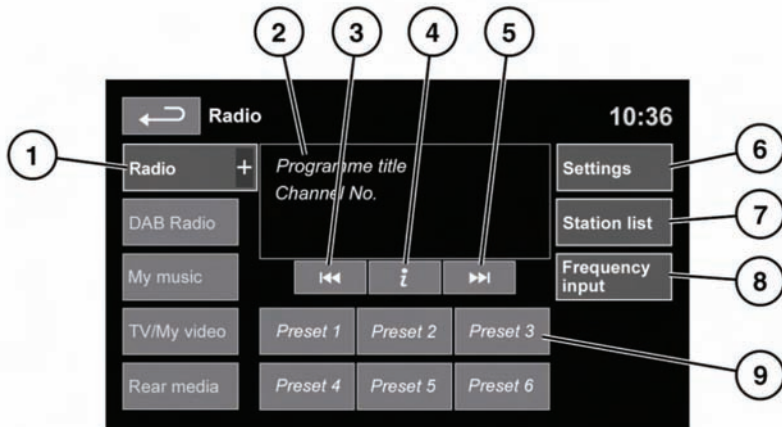

E135965

- 1. Radio:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
The waveband selection box will close automatically after 5 seconds without use.
- Displays information about the current station.
- Seek down:
 - Short touch to auto seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
- Information. More information from the broadcasting station.
- Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
- 6. Settings:** Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF** and **REG**. See **124**, **RADIO DATA SYSTEM (RDS)**.
- 7. Station list** (FM only): Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name** or **PTY** (pop, news, sport etc.) by selecting the appropriate soft key. Touch to select the chosen station.
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
- 8. Frequency input:** Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select OK or wait for 2 seconds to tune to the entered frequency.