

- To select the next track on chosen audio source - CD, MP3 etc.
- To select the next TV channel on the channel list or the next DVD chapter.

Long press:

- To activate radio manual seek mode.
- To scan forwards through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single increments. A further long press will scan forwards through the current waveband until the button is released.

6. CD/DVD loading slot.

The player will accommodate 1 disc at a time, but up to 10 CDs can be uploaded into the CD store. Only music discs can be uploaded into the CD store.

Only discs with music tracks and no other type, can be uploaded to the Stored CD store.

Insert a disc into the loading slot until resistance is felt. The player mechanism will complete the loading.

7. CD/DVD eject button.

8. Rotate to scroll through audio sources.

9. **MODE**. Press repeatedly to scroll through all audio/video sources.

10. **AUDIO VIDEO**. Press for direct access to the **Audio/Video** menu.

11. Touch screen.

12. Press to increase volume for any source.

13. Seek down:

Short press:

- To select the previous radio preset.
- To select the previous track or start of current track on chosen audio source - CD, MP3 etc.

- When telephone is in use, press to scroll down lists of calls or phonebook entries.

- To select the previous TV channel on the channel list or the previous DVD chapter.

Long press:

- To auto seek down the frequency to the next radio station.

14. Press to decrease volume for any source.

15. Seek up:

Short press:

- To select the next radio preset.
- To select the next track on chosen audio source - CD, MP3 etc.
- To select the next TV channel on the channel list or the next DVD chapter.

Long press:

- To auto seek up the frequency to the next radio station.

AUDIO SETTINGS

To view the audio settings menu, press the settings button or, on vehicles without dual view, the **Audio settings** soft key on the touch screen.

To adjust the sound settings:

1. Touch the + or - soft keys to adjust Bass, Treble or Subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Off** to switch surround sound off.

***Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.*