

Adjustment free headlamps: If the top of the headlamps are marked with the symbols shown above, they are adjustment free. No mechanical adjustment is required or the need for any external obscuration decals.

Manually adjustable headlamps: If there are no symbols on the headlamp, there is a lever in each headlamp which allows you to manually adjust the beam pattern.

When new, the lever will be set to the correct position for the country in which the vehicle is sold. To change the pattern for driving on the alternate side of the road, move the lever to the alternate position, see **39, ADJUSTING XENON HEADLAMPS** or **40, ADJUSTING HALOGEN HEADLAMPS**.



Note: The headlamps must be removed in order to change the beam pattern, see **178, HEADLAMP REMOVAL**.

Note: On left-hand drive vehicles fitted with halogen headlamps, the lever is on the left-hand side of the bulb aperture.

Note: When changing the beam pattern using the lever, ensure that you change the lever position on both headlamps.

Note: If the Auto high beam feature is enabled, you should also configure the system for the side of the road on which you are driving. See **56, INSTRUMENT PANEL MENU**.

ADJUSTING XENON HEADLAMPS

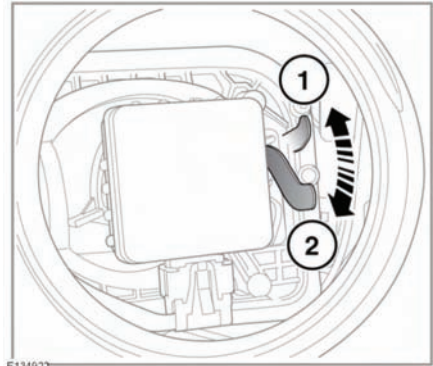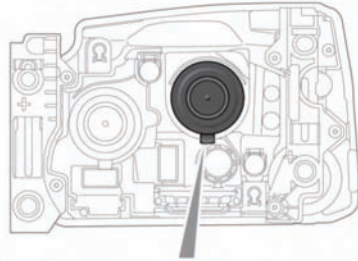

1. Lever in the correct position for the market where the vehicle was originally sold.
2. Lever in the correct position for when driving in countries where they drive on the opposite side of the road.

With the domed cap removed, move the lever to the appropriate position.