


TOUCH SCREEN HOME MENU

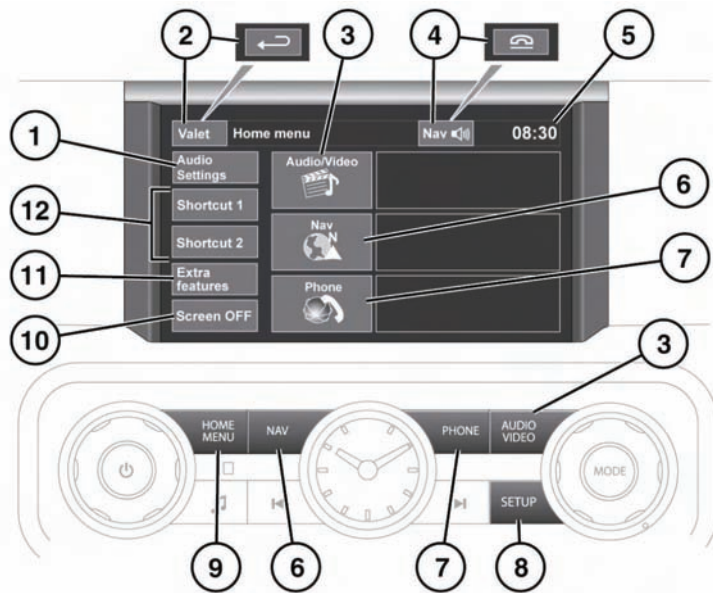

E141119



Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.



Always run the engine during prolonged use of the touch screen. Prolonged use will cause the battery to discharge.



Do not use excessive pressure when selecting items on the touch screen.



Avoid spilling or splashing liquids onto the touch screen.

1. Touch to select the **Audio settings** menu. See **118, AUDIO SETTINGS**.
2. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed.
3. Touch or press to select the **Audio/Video** menu. See **117, AUDIO/VIDEO CONTROLS**.
4. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
5. Touch to adjust time/date.
6. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
7. Touch or press to select the **Phone** menu.
8. Press to select the touch screen **Setup** menu.
9. Press to select the **Home menu**.
10. Press to turn off the screen.
11. Press to select the **Extra features** menu.