


## STATIC BENDING BULB REPLACEMENT

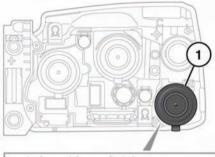

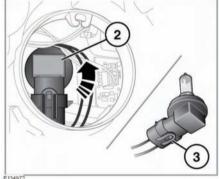

- 1. Twist and lift off the domed cap.
- 2. Rotate bulb holder and release from lamp.
- **3.** Lift the tab and disconnect the electrical connector to remove.

## **SIDE LAMP BULB REPLACEMENT**

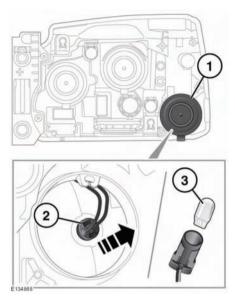

- 1. Twist and lift off the domed cap.
- 2. Press the two tabs and pull bulb holder from lamp.
- 3. Pull bulb from holder to remove.