


## DAB RADIO CONTROLS

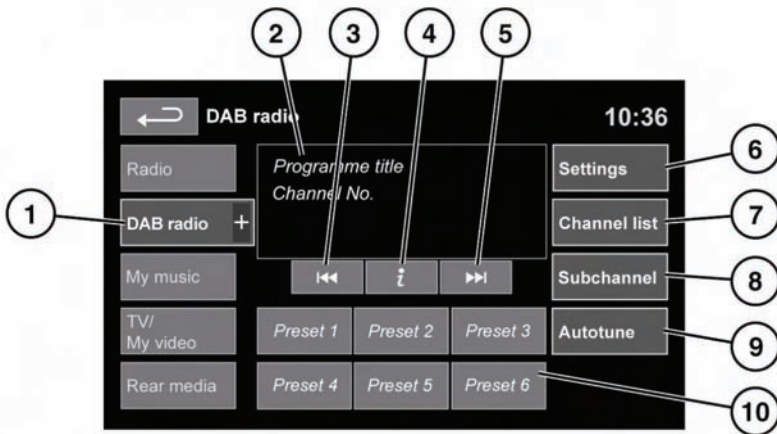

E142729

- DAB Radio:** Touch to view and select a DAB band (**DAB 1, 2 or 3**). The radio will tune to the last used channel on that band. Touch again to close.  
The DAB band selection box will close automatically after 5 seconds without use.
- Indicates currently selected DAB band (**DAB1, 2 or 3**).
- Seek down:
  - Short touch to seek previous available channel.
  - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
- Channel information: Touch to view DAB text and channel information.
- Seek up:
  - Short touch to find the next available channel.
  - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.
- Settings:** Touch to view the DAB Settings menu:
  - **Options:** To activate/deactivate FM Traffic and Link DAB and to alter DAB country and format settings (with vehicle stationary).
  - **Announcements:** Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.
- Channel list:** Touch to view a list of available Ensembles and channels. The list can be sorted by **Ensemble, Channel, Subchannel** or by **Category**.
  - If an **Ensemble** is selected from the list, all available channels from that ensemble will be displayed.
  - Sorting by **Subchannel** is only available when the current channel is broadcasting subchannels.
  - If **Category** is selected, touch the chosen category to view