
DAB RADIO CONTROLS

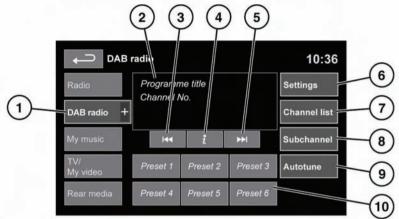

E142729

 DAB Radio: Touch to view and select a DAB band (DAB 1, 2 or 3). The radio will tune to the last used channel on that band. Touch again to close.

The DAB band selection box will close automatically after 5 seconds without use.

- 2. Indicates currently selected DAB band (DAB1, 2 or 3).
- 3. Seek down:
 - Short touch to seek previous available channel.
 - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
- **4.** Channel information: Touch to view DAB text and channel information.
- **5.** Seek up:
 - Short touch to find the next available channel.
 - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.

- **6. Settings**: Touch to view the DAB Settings menu:
 - Options: To activate/deactivate FM
 Traffic and Link DAB and to alter DAB country and format settings (with vehicle stationary).
 - Announcements: Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.
- Channel list: Touch to view a list of available Ensembles and channels. The list can be sorted by Ensemble, Channel, Subchannel or by Category.
 - If an Ensemble is selected from the list, all available channels from that ensemble will be displayed.
 - Sorting by Subchannel is only available when the current channel is broadcasting subchannels.
 - If Category is selected, touch the chosen category to view