


ELECTRIC SEATS

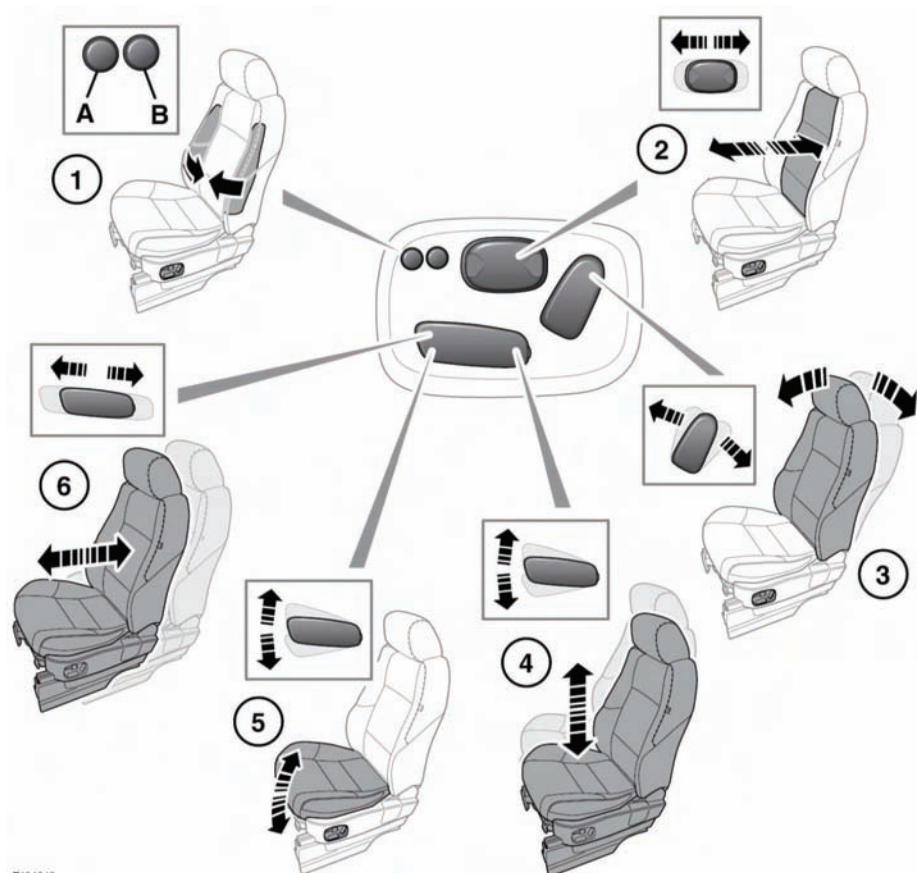

E134818



Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.

1. Bolster adjustment:
 - A. Bolster inflate.
 - B. Bolster deflate.
2. Lumbar support adjustment.
3. Backrest adjustment.
4. Height adjustment.

5. Cushion tilt adjustment.
6. Fore and aft adjustment.

To adjust the seats, the Smart Key must be in the vehicle and the ignition switched on.