

Warning lamps

SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **83, HILL DESCENT**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

LOW RANGE (GREEN)



Illuminates when Low range has been selected.

CRUISE CONTROL (GREEN)



Illuminates when cruise control is active.

TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.