

VEHICLE LOADING

It is possible to select different tyre pressure monitoring levels that correspond to the tyre pressures and load information on the tyre pressure label for a light or heavily laden vehicle. See **208, TYRE PRESSURES**.

Note: *Make sure that the tyre pressures are correct for the vehicle load.*

The different tyre pressure monitoring levels can be set via the **Vehicle Set-Up** menu (see **56, INSTRUMENT PANEL MENU**).

Note: *The TPMS setting must correspond with the vehicle load.*

FULL SIZE SPARE WHEEL AND TYRE CHANGE

The system will automatically recognise any changes in wheel positions. The vehicle must be stationary for 15 minutes during the wheel and tyre change, to ensure that the system can detect the change. After driving above 25 km/h (18 mph) any deflation warning should clear within approximately 5 minutes.