

Maintenance

FRONT FOG LAMP BULB REPLACEMENT

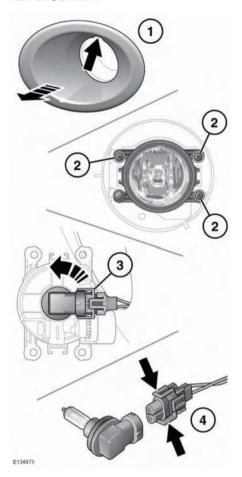

- 1. Using the finger slot at the top of the lamp surround, pull to remove.
- 2. Undo the three retaining screws, and remove the lamp unit.
- **3.** Rotate the bulb holder (anti-clockwise) and remove from the lamp unit.
- **4.** Press the two clips together, and remove the electrical connector.

DIRECTION INDICATOR BULB REPLACEMENT

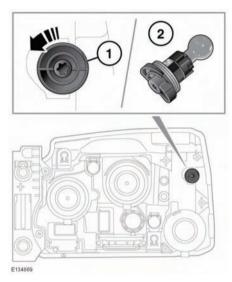

- 1. Rotate the bulb holder 45 degrees anti-clockwise.
- 2. Remove the bulb assembly from the lamp.
 Push and twist to remove the bulb.