

### IMPERIAL/METRIC/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units in the Trip Computer menu of the message center.

See **62, INSTRUMENT PANEL MENU**.

**Note:** *Temperature display can be changed between °F (Fahrenheit) and °C (Celsius) independently of Imperial or Metric units.*

### SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the message center, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.