

Rear seats


4. Pull the backrest up and push into place. When fully home the latching mechanism will click.

ACCESS POSITION (7 seat vehicle)

⚠ WARNING

The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the backrest to fall forwards suddenly, causing injury.

To access the third row of seats by this method, the headrest on the second row seat must first be fully lowered.

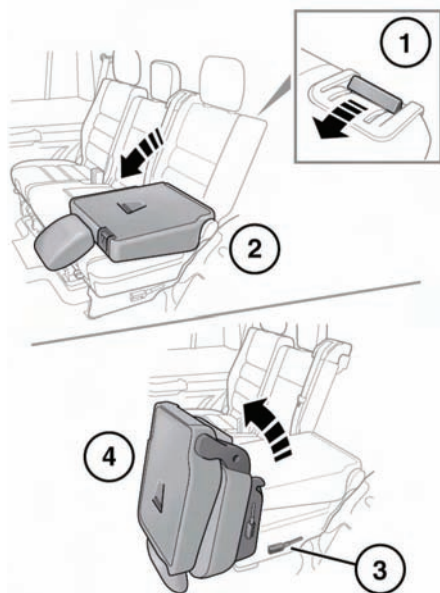

E134918

1. Pull the backrest lever forwards.
2. Lower the backrest into the table fold position.
3. Pull the access lever on the side of the seat.
4. Tilt the seat forwards.

To return the seat to the upright position, lower the seat until the access lever re-engages, then pull the backrest lever and return the backrest to the upright position.

Note: A second row seat cannot be moved directly from the loadspace position to the access position. The backrest must first be returned to the table fold position.

⚠ WARNING

When returning the seat from the access position, ensure the area under the seat is clear from obstructions that may prevent the seat from locking securely in place.

⚠ WARNING

Always check and physically test the cushions and backrest are secure before driving. If the backrests are not fully locked in place, red markers will be visible around the backrest levers. Unsecured seat cushions and backrests may not properly restrain an occupant during a collision or sudden stop.

THIRD ROW SEATS (7 seat vehicle)

⚠ WARNING

Beware of trapping fingers when raising and lowering the third row seat.

NOTICE

Ensure nothing has been left under the third row seat, or in the footwell when folding down the seat, as this could cause damage to the item or the seat.

NOTICE

Do not attempt to raise the third row seats when the loadspace cover is stowed behind the second row seats. Damage to the loadspace cover or the seats may result.

It is possible to fold the third row seats flat.