

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)

**ABS**

Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AIR BAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the air bag system. Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## LOW FUEL WARNING (AMBER)



Illuminates when the remaining fuel is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

## TIRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

## TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.