


TOUCH SCREEN HOME MENU

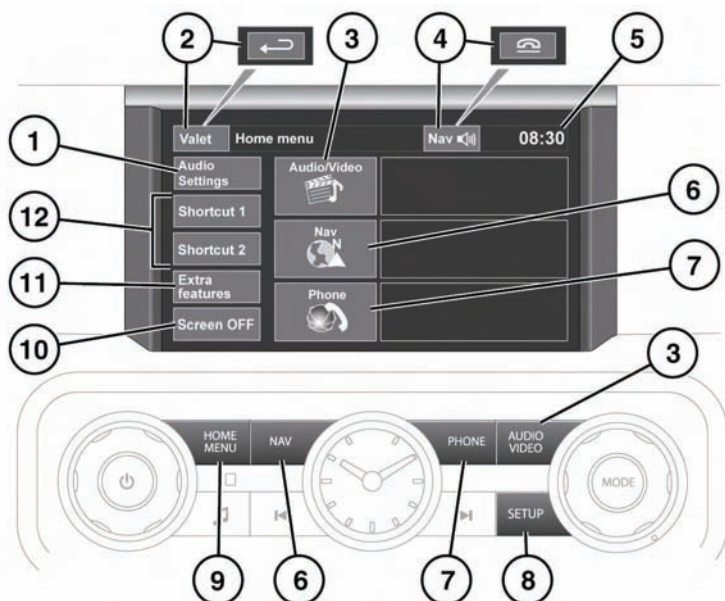

E141119

⚠ WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

1. Touch to select the **Audio settings** menu.
2. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed
3. Touch or press to select the **Audio/Video** menu. See **106, AUDIO/VIDEO CONTROLS**.
4. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
5. Touch to adjust time/date.

6. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
7. Touch or press to select the **Phone** menu.
8. Press to select the touch screen **Setup** menu.
9. Press to select the **Home** menu.
10. Press to turn off the screen.
11. Press to select the **Extra features** menu.
12. Touch to select Home menu shortcuts. See **104, SYSTEM SETTINGS**.

TOUCH SCREEN USE

NOTICE

Always run the engine during prolonged use of the touch screen. Prolonged use will cause the battery to discharge.