

NOTICE

Land Rover does not recommend the use of a Hard Disc Drive via the USB link while the vehicle is in motion. These devices are not designed for in car use and may be damaged.

CONNECTING MULTIPLE DEVICES

NOTICE

Do not plug non-audio devices into the USB port.

You can connect multiple devices simultaneously to the portable media interface and switch between them using the touch screen. Select **iPod**, **USB**, **Bluetooth** or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

Note: *You cannot use a USB hub to connect more than one USB device to the audio unit.*

Note: *Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.*

Note: *Options such as **Repeat** and **Shuffle** relate to the device currently playing; they will not apply to any subsequent device.*

PAIRING AND CONNECTING USING THE MEDIA PLAYER

For further information on Bluetooth®, see **133, BLUETOOTH® INFORMATION**.

Note: *The process of pairing and connecting your media device with the vehicle, using the media device, will vary depending on the type of media device*

1. Switch on the ignition and ensure the touch screen is active.

2. From the Home menu, select **Audio/Video**, then **My music**.
3. Touch **Bluetooth**.
4. A menu will appear. Select **Change device**.
5. Select **Device to vehicle** option.

Note: *The vehicle's Bluetooth® system is only discoverable for 3 minutes.*

6. Using the media device, search for Bluetooth® devices. On some media devices, this is referred to as new paired device. See your media device's operating instructions for further information.
7. When the vehicle's Bluetooth® system is discovered, follow the on-screen instructions. Select **Yes** when prompted, to confirm the pairing.

Either your device or the vehicle system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.

8. Enter the same PIN into the other device.
9. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music**, Bluetooth® screen.

Note: *Some media players do not automatically connect and need to be manually connected, via the device or by using the **Change device** option.*

PAIRING AND CONNECTING USING THE TOUCH SCREEN

For further information on Bluetooth®, see **133, BLUETOOTH® INFORMATION**.

1. Switch on your device's Bluetooth® connection. Make sure that it is in Bluetooth® discoverable mode, sometimes referred to as find me mode (see your device's operating instructions for more information).