

7. If the Smart Key fails to open the vehicle:

- Insert the emergency key into the slot at the base of the door lock cover. Gently lever upwards and twist to release the cover from the retaining clips.
- Insert the emergency key into the exposed lock to operate.

To lock: Ensure all doors and the tailgate are closed, then turn the key towards the front of the vehicle and release. This will lock the doors but will not arm the alarm.

To unlock: Turn the key towards the rear of the vehicle and release. If the security system is disarmed, all doors and the tailgate will be unlocked. If the security system is armed, only the driver's door will unlock.

If the vehicle is unlocked using the emergency key with the security system armed, the alarm will sound when the door is unlocked. To deactivate the alarm, press the unlock button on the Smart Key or press the engine START/STOP button with the Smart Key inside the vehicle.

Note: A replacement Smart Key can only be obtained from your Land Rover Retailer/Authorized Repairer. The Land Rover Retailer/Authorized Repairer will require proof of ownership.

Notify your Land Rover Retailer/Authorized Repairer immediately if a Smart Key is lost or stolen.

Note: The fuel filler flap can only be opened when the vehicle is unlocked.

GLOBAL OPENING

Press and hold the unlock button for 3 seconds to unlock the vehicle and open all of the windows.

To cancel global opening, press any of the buttons on the Smart Key or operate the driver's window switch. To stop a particular window opening, operate the relevant window switch.

KEYLESS ENTRY

Note: The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.

Keyless entry allows the vehicle to be unlocked or disarmed, simply by operating any door handle. For keyless entry to activate, the Smart Key must be within 3 feet (1.0 m) of the door handle when it is operated. When keyless entry operates, the alarm will be disarmed and the doors unlocked according to the current security setting (single or multipoint entry). The hazard warning lamps will flash twice as confirmation (in some markets an audible warning will sound twice).

Note: The Smart Key needs only to be on the driver's person or in a non-metallic bag or briefcase. It does not need to be exposed or handled.

Note: If single point entry is the current security setting, and a door other than the driver's door is opened first, the vehicle will behave as if multi-point entry is active (i.e. all doors will unlock).