


## TELEPHONE SYSTEM OVERVIEW

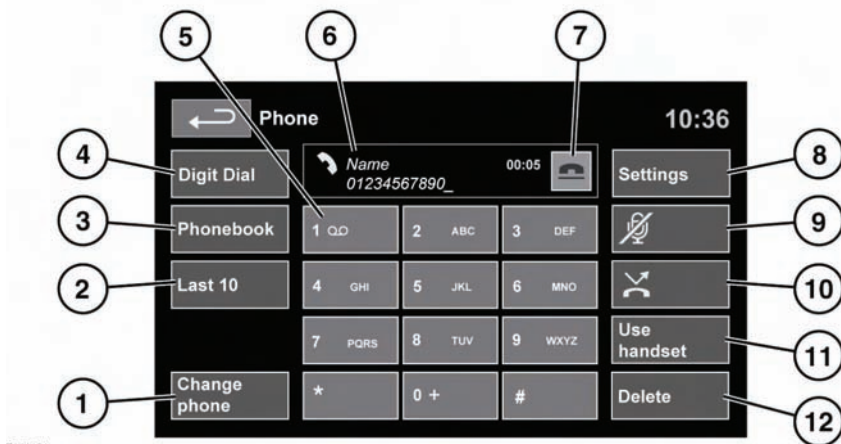

E141184

**⚠ WARNING**

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

- 1. Change phone.** Search new or change to another paired phone.
- 2. Last 10.** Access the last 10 dialed, received and missed calls.
- 3. Phonebook.** Access the downloaded phonebook.
- 4. Digit Dial.** Access Digit Dial mode.
- 5.** Touch and hold to retrieve your Voice mail.
- 6.** Status display: Displays the name and/or number dialed and call duration.
- 7.** Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
- 8. Settings.** Access Voice mail set up, Answer options and Phone options.

- 9. Mute microphone.** Initiate Privacy mode. While selected, the caller will not hear you talking.
- 10. Auto reject.** When active, any incoming calls will be rejected or diverted to voice mail (depending on cell phone settings).
- 11. Use handset.** Switch the call to your cell phone.
- 12. Delete.** Touch to delete the last entered digit, and hold to delete the whole entered number.

**BLUETOOTH® INFORMATION**

Bluetooth® is the name for short-range radio frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover Bluetooth® system supports Bluetooth® Hands-Free Profile (HFP) Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).