

GARAGE DOOR TRANSCEIVER

CAUTION

Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature as required by safety standards.

CAUTION

When programming the transceiver to a garage door opener or entry gate, ensure the area is clear. This will prevent potential harm or damage as the gate or garage door will activate during the program.

NOTICE

This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter as well as the in-car transceiver.

The door transceiver is located in the rear-view mirror. It can be programmed to transmit the radio frequencies of up to three different transmitters, which can be used to operate garage doors, entry gates, home lighting, security systems or other radio frequency operated devices.

Although this section mainly describes the procedures for a garage door opener, it equally applies to the previously mentioned applications.

This feature may also be known as the HomeLink™ Universal Transceiver.

Note: HomeLink™ is a registered trademark owned by Johnson Controls, Inc. Milwaukee, Wisconsin.

For further information, see **56, INFORMATION AND ASSISTANCE.**

Radio frequency spectrum regulation statements:

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The transceiver radio frequency approval number for the USA and Puerto Rico is **K8597R315.**

Canada

IC-RSS-210:

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference including interference that may cause undesired operation of the device.

The transceiver radio frequency approval number for Canada is **2145 101 790A.**

BEFORE PROGRAMMING

NOTICE

When programming a device that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.

For best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programming. If your garage door opener receiver (located in the garage) is equipped with an antenna, ensure that the antenna is hanging straight down.