


## FOLDING THE SEATS (7 seat vehicle)

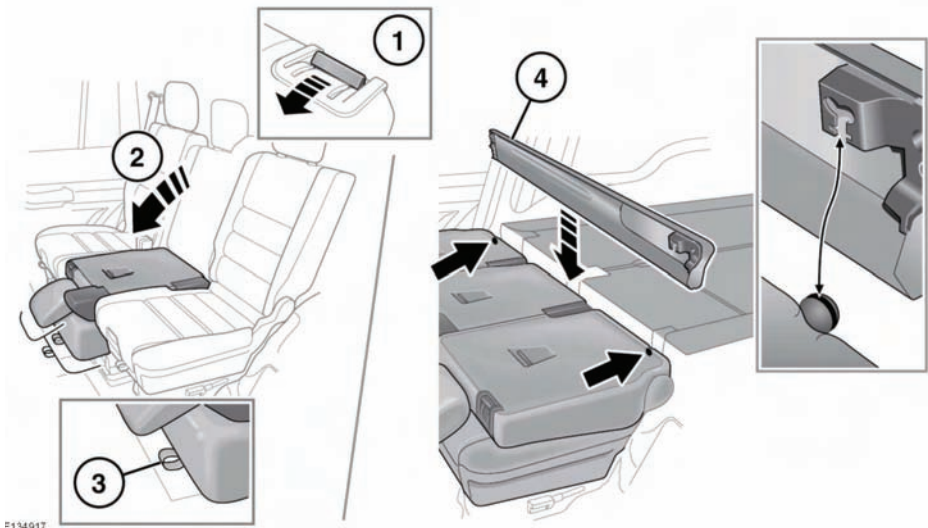

One of the seats may be folded to form a table for the other two seats, or all three seats may be folded forward to extend the loadspace. A seat may also be folded to gain access to the 3rd row seats.

**Note:** The rear seats may not be folded if the front seats are in their furthest rearward position.

**Note:** The center backrest must always be folded first.

1. Pull the backrest lever forwards.
2. Fold the backrest forwards into the table fold position.
3. Pull the strap at the front of the seat and press down to fold into the loadspace extension position.
4. The loadspace cover may be stowed as shown behind the folded seats.

## RAISING THE SEATS (7 seat vehicle)

### ⚠ WARNING

Always check and physically test the cushions and backrest are secure before driving. If the backrests are not fully locked in place, red markers will be visible around the backrest levers. Unsecured seat cushions and backrests may not properly restrain an occupant during a collision or sudden stop.

### NOTICE

Do not attempt to raise the seats when the loadspace cover is stowed behind them. Damage to the loadspace cover will result.

**Note:** The center backrest should always be raised last.

1. Pull the strap at the front of the cushion.
2. Grasp the top and bottom of the backrest, lift the seat and return it to the table fold position.
3. Push the release lever forward.