

## REMOTE CONTROL



1. RSE on/off.
2. Cabin audio on/off (operates in Limousine mode only).
3. Cabin audio volume increase/decrease (operates in Limousine mode only).
4. Right user system select.
5. Screen brightness control: Select from day, night and auto.
6. Video screen format/zoom.
7. Rear USB socket select (video).
8. AUX socket input select (video).
9. iPod input select.
10. DAB radio select (market dependant).
11. Rear USB socket select (audio).
12. Indicates color of buttons with audio function.
13. Data disc select (audio).
14. Indicates color of buttons with video function.
15. SAT radio select (market dependant).
16. CD select.
17. Radio select.
18. DVD select.
19. Data disc select (video).
20. TV select (market dependant).
21. Screen on/off.
22. Left user system select.
23. Seek forward and backwards for selected source and next/previous chapter for DVD.
24. Play/Pause for all non-live media (USB/ iPod/ CD/ DVD/ Data Disc).
25. Press to select highlighted station/channel/menu item.
26. DVD menu navigation: Press to move up.
27. DVD menu navigation: Press to move right.

E148794