
ADJUSTING THE STEERING WHEEL

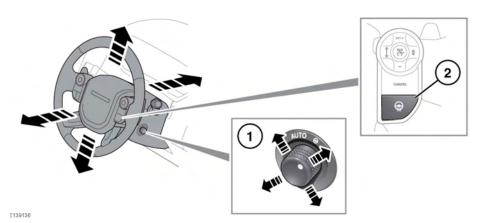

AWARNING

Never adjust the steering column while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident

- **1. Electric adjustment:** Move the control up or down to adjust the tilt/height.
 - Move the control forwards or rearwards to adjust reach.
- Heated steering wheel: Press to turn on and off. The switch indicator will illuminate amber when heating is on.

ENTRY AND EXIT MODE

With the steering column control (1) in the **AUTO** position, the steering column and driver's seat will move to provide easier entry and exit from the vehicle.

On opening the driver's door the system will raise the steering column to the highest position, and lower the driver's seat to a lower position assisting with exit from the vehicle. When the driver's door is closed and the ignition turned on, the system will return the driver's seat and steering column to the previous position.

Note: If the driver's seat or steering column are adjusted during entry or exit operation, automatic movement will stop.

To prevent automatic movement of the driver's seat and steering column, turn the control clockwise to the manual position.

Note: If the steering column switch is moved away from **AUTO** when the driver's seat and steering column is in the exit position, the driver's seat and steering column will move back to their previous positions when the driver's door is closed and the ignition is switched on.

Steering wheel

POWER STEERING

A fault with the power steering system is indicated by a message in the Message center, accompanied by an amber warning lamp (see 67, GENERAL WARNING/INFORMATION MESSAGE (AMBER)). A reduction in power steering assistance may be experienced. The fault may be caused by overheating due to extensive steering inputs or high ambient temperatures.

Full steering assistance should return when the system has been allowed to cool. If full steering assistance does not return, consult a Land Rover Retailer/Authorized Repairer.