
RADIO CONTROLS

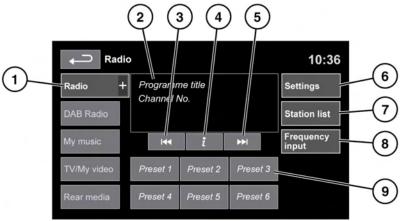

E135965

AWARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

AWARNING

Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- Radio: Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
 - The waveband selection box will close automatically after 5 seconds without use.
- 2. Displays information about the current station.

Seek down:

- Short touch to auto seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

Note: When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.

- **4.** Information. More information from the broadcasting station.
- 5. Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.

- Settings: Touch to view and activate/deactivate the following features: RBDS and HD Radio. See 149, RADIO BROADCAST DATA SYSTEM (RBDS).
- 7. Station list (FM only): Select to view a list of available stations on the waveband. The list can be sorted by Frequency, Name or Category (pop, news, sport etc.) by selecting the appropriate soft key. Touch to select the chosen station.
 - If the stations are sorted by category, touch the chosen category to view and select a corresponding station.
- 8. Frequency input: Select to enter a known frequency of a station on the current waveband, using the numeric keypad that appears. Select OK or wait for 2 seconds to tune to the entered frequency.
- **9. Station presets**: Each waveband has 6 preset positions.
 - Touch and release to tune to the station stored on that preset.
 - Touch and hold to store the current station on that preset (the radio will mute while the station is stored then beep).
 - Use the seek buttons on the steering wheel to change to the next or previous preset station.

RADIO BROADCAST DATA SYSTEM (RBDS)

Your radio is equipped with RBDS which enables the audio unit to receive additional information with normal FM radio signals.

Note: Not all FM radio stations broadcast RBDS information.

Select **Settings** then select **RBDS On** to view or alter RBDS settings.

- RBDS station name display. The station name will not display if it is not available from the broadcaster or if RBDS is unavailable due to loss of reception.
- RBDS enables stations to be categorized by program type, e.g., rock music, current affairs, news, etc. The list is then available to view via the **Station list** soft key.

ALERTS

The **ALERT!** option in the **Category** section of the **Station list** will alert you to a crisis of national or international importance. Any radio broadcast or other audio playback will be interrupted. When such a broadcast is made, an ALERT pop-up will be displayed on the touch screen. The pop-up can be cancelled, but the audio alert will continue to broadcast until finished or until the radio station or audio source is changed.