
## **CLIMATE CONTROL**

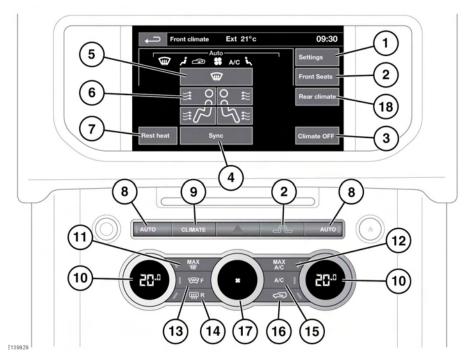

Press the **CLIMATE** hard key to access the climate control touch screen menu.

- 1. Climate control settings menu.
- 2. Front heated/climate seat menu.

**Note:** Heated seats operate only when the engine is running

- 3. Climate control system on/off.
- 4. Synchronizes climate zones.
- 5. Distribute air to windshield.
- 6. Air distribution.

**Note:** More than 1 setting may be selected at a time to achieve the desired distribution.

**Note:** Headlining vents deliver cold air only, regardless of temperature settings.

- 7. Rest heat: With the engine switched off, press to operate. With a warm engine, it is possible to provide cabin heating, by using the residual heat from the engine. This facility can be selected for up to 15 minutes after the engine is switched off and will operate until the engine cools.
- 8. AUTO. For fully automatic operation.
- 9. **CLIMATE** hard key.
- **10.** Temperature controls. For individual driver/passenger settings.
- 11. Maximum defrost program.
- **12.** Maximum air conditioning (cooling) program.

- Heated windshield. The heated windshield will deactivate after a predetermined length of time.
- Heated rear screen. The heated rear screen will deactivate after a predetermined length of time.

## NOTICE

Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

- 15. Air conditioning.
- **16.** Recirculation. Press for timed recirculation. Press and hold for latched (continuous) recirculation. To cancel recirculation, press the button again.

**Note:** Prolonged use at low temperatures may cause the windows to fog.

- 17. Blower speed control. In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch off climate control, rotate fully counter-clockwise, stop and then turn counter-clockwise again.
- 18. Rear climate menu.

**Note:** An indicator lamp in the switch will illuminate when the function is selected.

**Note:** To help keep the windows clear of ice, close the center face level vent and direct air flow from the outer face level vents towards the side windows.

**Note:** The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.

## **AUTOMATIC RECIRCULATION**

If an air quality sensor is fitted, the climate control system will monitor exterior air pollution and humidity and select recirculation if either reaches a predetermined level. This feature only operates when the climate control system is in **AUTO** mode. The sensitivity of the air quality sensor can be set via the touch screen. See **81**, **AIR QUALITY SENSOR**.

Pressing the recirculation button will deactivate automatic recirculation.

## AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the touch screen:

- 1. Select **Settings** from the **Climate** menu.
- 2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch off air quality sensing, decrease sensitivity to the minimum setting.



The auto recirculation icon appears on the touch screen when the air quality sensor is switched on.

## **CLIMATE SEATS**

**Note:** The climate seats will only operate when the engine is running.

Climate seats are controlled from the **Home** or **Climate** menus on the touch screen or by the CLIMATE or seat menu hard keys. See **83**,

#### **SEAT MASSAGE**

**Note:** The **Front seats** menu will be displayed. Heated ventilation:

- Touch the up arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).

 Touch the down arrow a third time to switch off seat ventilation.


#### Cooled ventilation:

- Touch the down arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off seat ventilation.

#### Seat zone selection:

 Constant selection of the Seat zone soft key will scroll through the 3 choices of seat zone; full seat, cushion or back rest only.

# **SEAT MASSAGE**

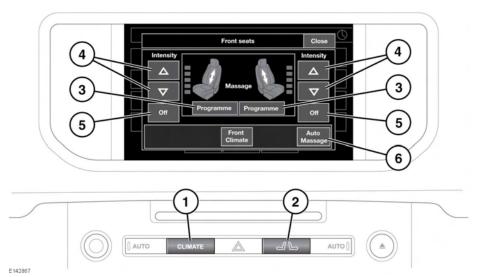

**Note:** Seat massage will only operate when the engine is running.

Seat massage may not operate when the vehicle interior temperature is below 32°F or above 122°F (0°c or 50°c respectively).


Seat massage is controlled through the touch screen. Either:

- Press to display the Front Climate menu. Touch the Seats soft key, then touch the Massage soft key or;
- 2. Press to display the Front seats pop-up menu. Then touch the **Massage** soft key.
  - The pop-up menu screens will overlay the current screen. They will time out after a short period and the previous menu screen will be displayed.
- Touch to display the desired seat massage program. Constant selection will scroll through the 5 different programs.
- **4.** Touch to vary the intensity of the selected program.

- 5. Touch to end the program.
- 6. Touch to display a menu which allows the driver's seat Auto massage to be switched On or Off and to set the Time delay from the start of the journey to 5, 15, 30 or 60 minute intervals.

After 10 minutes, the seat massage will stop automatically.

## REAR CLIMATE CONTROL

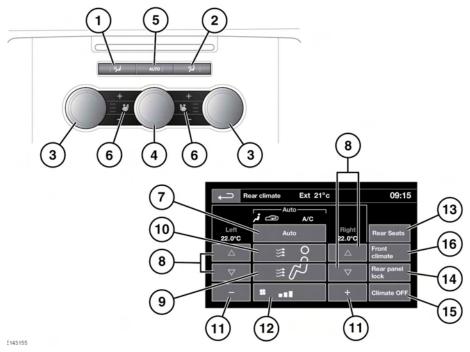

There are 2 types of rear climate control: 3 Zone and 4 Zone. All of the 3 zone controls will affect the whole of the rear passenger compartment. The 4 Zone allows independent control of each side.

To access the rear climate touch screen menu, select **Rear climate** from the **Front climate** menu.

**Note:** When DEFROST is selected at the front, rear control is suspended until the defrost program ends.

There are also 2 types of seat cushion temperature controls.



Seat heat allows heating temperature control.



Climate seats allows heating and cooling temperature control.

**Note:** More than one setting at a time may be selected to achieve the desired air distribution.

- Air distribution to feet. Press to switch on/off. Switch indicator illuminates when on.
- Air distribution to face. Press to switch on/off. Switch indicator illuminates when on.
- 3. Temperature controls. Rotate to adjust between 59°F 83°F (16°C 28°C). The temperature settings are displayed on the Touch screen. **Rear climate** menu.
- 4. Blower speed control. Rotate to adjust.

- 5. Press AUTO to select full auto mode operation. The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) without further adjustments. The air distribution and blower controls may be operated independently to override auto mode. If you do this, the indicator lamp on the switch will go out. Press again to return to full auto mode operation.
- 6. Seat heat/Climate seats temperature controls. Select the upper switch to increase and the lower switch to decrease. The 3 bar light display shows temperature status.
- 7. Touch to select AUTO mode on/off.
- Temperature controls. Select the red arrow to increase and the blue arrow to decrease. The temperature settings are displayed above the arrows.
- Air distribution to feet. Touch to switch on/off.
- Air distribution to face. Touch to switch on/off.
- **11.** Blower speed control. Touch left or right to adjust.
- **12.** Blower speed indicator.
- **13.** Touch **Rear seats** to adjust the Seat heat/Climate seats temperature settings.
- 14. Touch Rear panel lock to disable the rear climate control switches, to prevent the rear passengers from adjusting the rear climate settings. Select again to re-enable the controls.
- **15.** Touch **Climate OFF** to exit the **Rear climate** menu.
- **16.** Touch **Front climate** to open the **Front climate** menu.

In addition to the selectable controls, the rear climate menu displays symbols that indicate the status of heating and ventilation functions.

**Note:** If the climate control system is switched off, pressing a rear AUTO button will switch the climate control system on.