


## USING THE PARKING AID

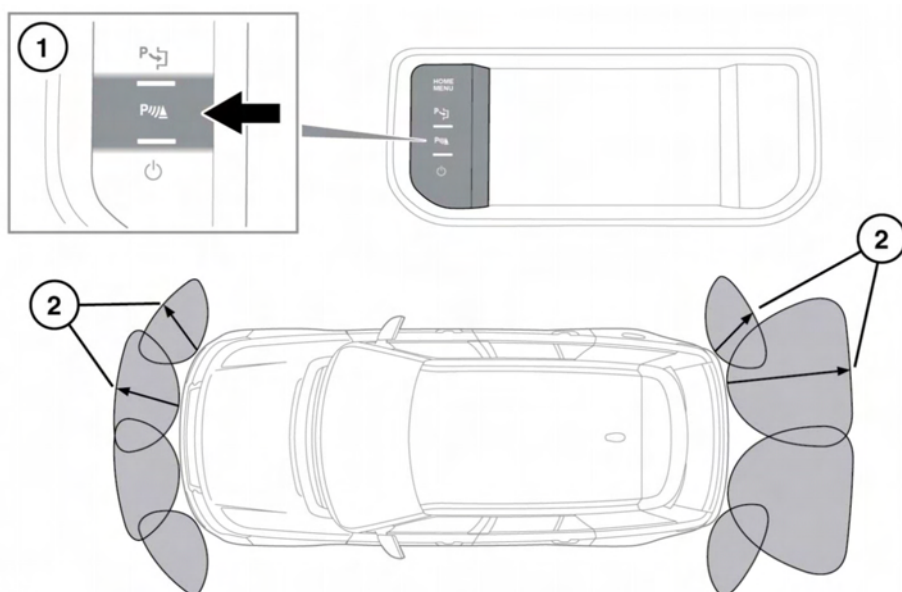

E149183



**Parking aids may not detect moving objects such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**



Parking aid sensors may not detect some obstructions (e.g. narrow posts or small objects close to the ground).



If accessories are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

**Note:** The rear sensors are automatically disabled when a trailer is connected.

1. Parking aid switch. Press to turn on or off.
2. Parking aid detection range.

When Reverse (R) is selected, the front and rear parking sensors are activated automatically. The indicator on the parking switch will illuminate.

To manually activate the front sensors press the Parking aid switch. The indicator on the parking switch will illuminate.

When the Parking aid is active, a pop-up appears on the touch screen showing a plan view of the vehicle. Touch the screen to cancel the view.

**Note:** If a Rear camera is fitted, when reverse gear is selected the camera display is selected automatically. To view the Parking aid display, touch the screen.

To turn off the system when active, press the Parking aid switch. The indicator on the parking switch will extinguish.

## Parking aids

The range of the Parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting **N** from **R** will keep front and rear sensors active.

When objects are detected, the Parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

**Note:** The front Parking aid provides an audible proximity warning when driving forwards and when reversing.

### CLEANING THE SENSORS



When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.


### PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/ Authorised Repairer as soon as possible.

## REAR CAMERA



**It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**

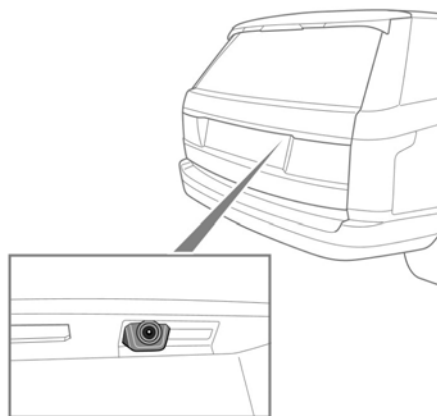

E138926


When reverse gear is selected, the screen automatically displays a wide angle, colour image from the rear of your vehicle.

The rear camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

**Note:** A return icon is displayed on the touch screen. Touch this to revert to the previously viewed screen.

Rear camera display on the touch screen will discontinue when either of the following apply:



- Drive is selected for longer than 15 seconds.
- Drive is selected and/or vehicle speed is greater than 11 mph (18 km/h).

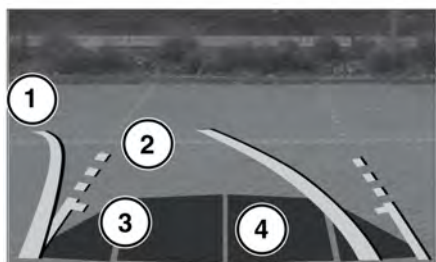

E145190

1. Solid line: The projected path based on current steering wheel position.
2. Dotted line: The safe working width of the vehicle (including exterior mirrors).
3. Tailgate access guideline: Do not reverse beyond this point if tailgate access is required.
4. Parking sensor activation: A coloured area appears, to indicate which rear sensor(s) has been activated.
5. User option. Touch to enable/disable (1), (2) and (3).
6. User option. Touch to enable/disable (4) Parking sensor.
7. User option. Touch to enable/disable Hitch Assist guidance lines.

### REVERSE TRAFFIC DETECTION

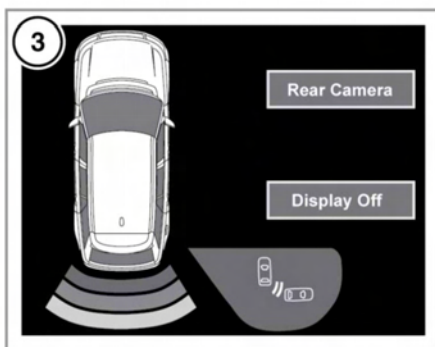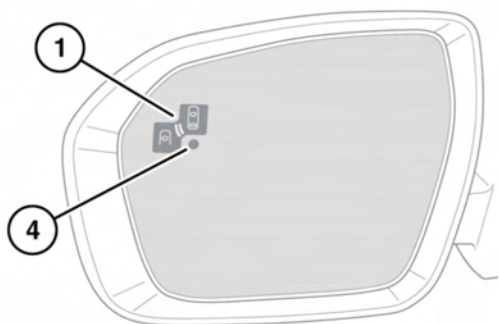

E144826



**The Reverse Traffic Detection (RTD) system is a supplement to, not a replacement for, safe driving, good observation and use of the exterior and rear-view mirrors.**

**Note:** RTD is automatically disabled when a trailer is connected and when Park assist is active.

In addition to the functionality provided by the rear camera, the RTD system provides a warning to the driver of any moving vehicle, at either side, that may pose an accident risk during a reversing manoeuvre.

An amber warning icon (1) will flash in the relevant exterior mirror and an audible warning will be emitted to indicate the presence of a moving vehicle. The rear camera screen (2) or the parking aid screen (3) will also show a warning on the relevant side(s) of the screen. To switch between the rear camera and the parking aid screen, touch the camera image or the **Rear Camera** icon accordingly.

The system can be enabled or disabled via the instrument panel menu (see **64, INSTRUMENT PANEL MENU**). When RTD is disabled, an amber dot (4) will be displayed in both exterior mirrors.

## REVERSE TRAFFIC DETECTION SENSORS

The RTD system will automatically disable if any of the sensors become partially or completely obscured, and the amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Sensor Blocked** appears in the Message centre.

Check that there is nothing obscuring the rear bumper and it is clear from ice, frost, snow, mud and dirt.

If a fault with a radar sensor is detected, an amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Detection System Not Available** is displayed in the Message centre.

**Note:** *Even if the detected fault only affects the radar sensor on 1 side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.*

If a fault occurs, consult your Dealer/Authorised Repairer.