


TOUCH SCREEN HOME MENU

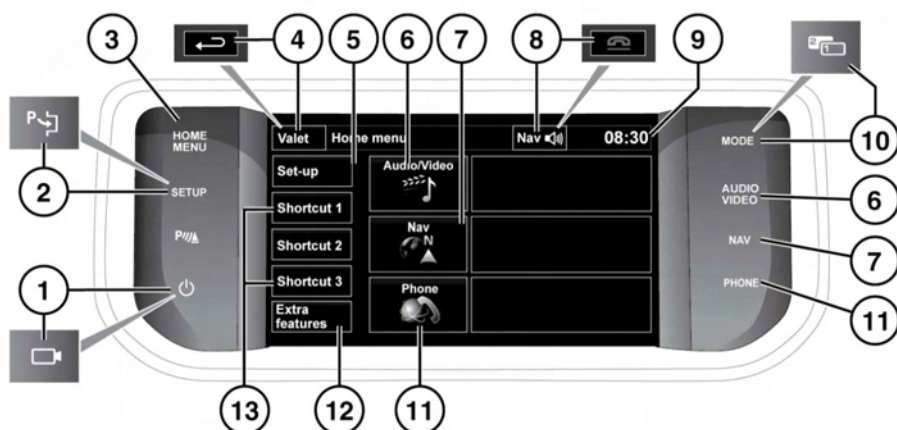

E149216

- ⚠ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
 - ⚠ Avoid spilling or splashing liquids onto the touch screen.
1. Press to turn on/off the screen. When proximity cameras are fitted, this icon is changed and the button will access cameras in the special views page. Touch the screen to display options.
 2. Press to select the touch screen **Setup** menu. When Park Assist is fitted, this icon is changed and the button should be pressed to activate Park Assist.
 3. Press to select the **Home menu**.
 4. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed
 5. Touch to select the touch screen **Setup** menu.
 6. Touch or press to select the **Audio/Video** menu, see **138, AUDIO/VIDEO CONTROLS**.
 7. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
 8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
 9. Touch to adjust time/date.
 10. Touch to select **Mode** menu. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
 11. Touch or press to select the **Phone** menu.
 12. Press to select the **Extra features** menu.
 13. To change the shortcuts, see **68, TOUCH SCREEN SETUP**.

TURNING OFF THE TOUCH SCREEN

Vehicles without proximity cameras:

1. Press the screen on/off hard key once to activate the screensaver (see **67, TOUCH SCREEN HOME MENU**). If the screensaver has not been set, a single press will turn off the touch screen.

Touch screen

2. Press the screen on/off hard key twice to turn off the touch screen.
3. To turn on the touch screen, press the screen on/off hard key.

Vehicles with proximity cameras:



1. From the **Home menu**, touch the screen off soft key to activate the screensaver. If the screensaver has not been set, touching the screen off soft key will turn off the touch screen.
2. From the screensaver, touch the screen off soft key to turn off the touch screen.
3. To turn on the touch screen, touch anywhere on the screen.

TOUCH SCREEN USE



Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting



Avoid spilling or splashing liquids onto the touch screen.

TOUCH SCREEN CARE



Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

TOUCH SCREEN SETUP

- Select **Set-up** from the Home menu.

The setup screen is divided into categories:

- Screen
- System
- Voice
- Audio

SCREEN SETTINGS

Volume pop-up: Display Volume pop-up on/off.

Screensaver: Change screensaver.

Time out home: Sub menu selection screens can be set to revert to the **Home** menu after a pre determined length of time.

Theme: Changes appearance of the touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone on/off.

Clock adjust: Select 12 or 24 hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

Note: The clock can also be adjusted from the touch screen time display.

Home menu shortcuts: Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust volume for the available systems (announcements, parking aid, phone, voice etc.).

VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.

Select an **Information** button to view alternative function commands.

- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **165, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:

- **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- **Voice feedback:** Select **On/Off**.
- **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.

Select **User 1** or **User 2** and follow the on screen and audible instructions. See **165, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **164, USING VOICE CONTROL**.

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used a Personal Identification Number (PIN) must be entered.

1. From the **Home** menu, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The luggage compartment and glove box are now securely locked in Valet mode and the Valet mode On screen is displayed.

DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

Valet mode deactivated is displayed to indicate that a PIN has been accepted.

- The luggage compartment and glove box will return to the previously set security requirement.
- The touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.

EXTRA FEATURES

This menu allows selected extra features to be displayed for adjustment or for switching on/off. For example:

- Ambient LED lighting.
- Configurable dynamic mode.
- Daytime running lamps.

There are more extra features available than can be displayed at one time, therefore they are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.