


FUSE BOX LOCATIONS

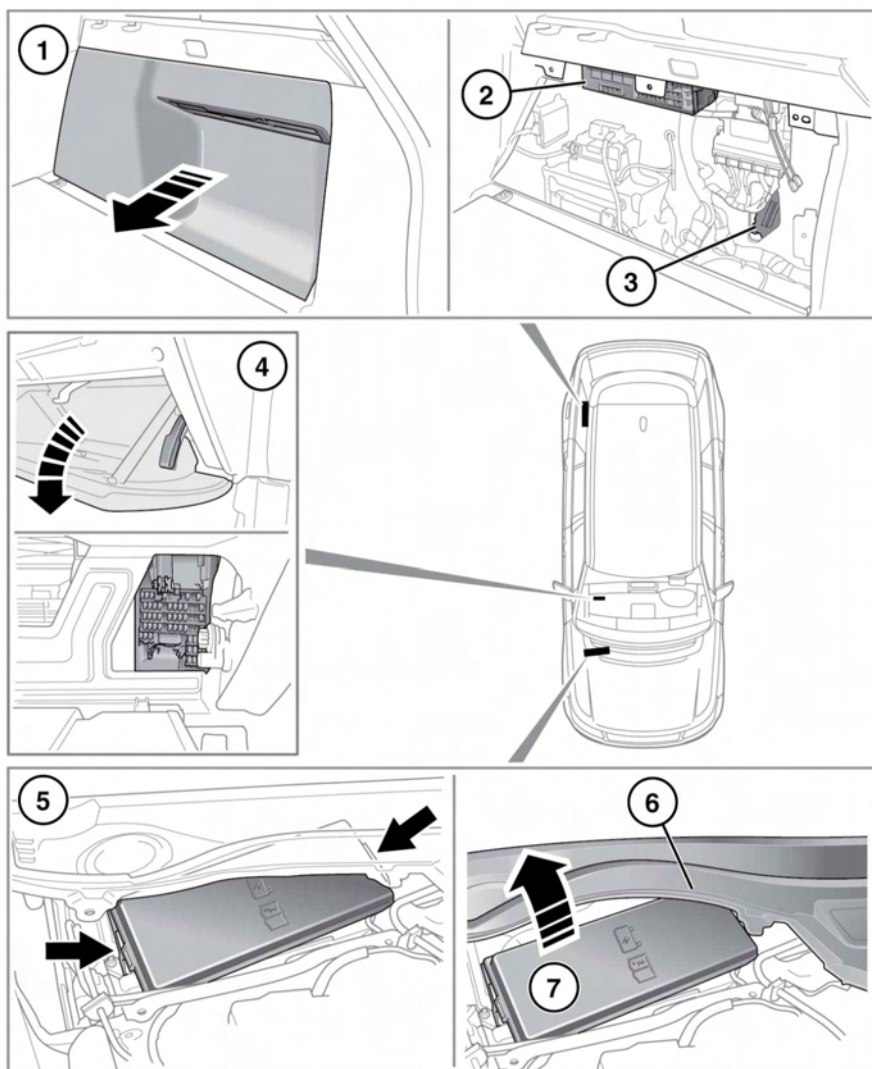

E149369



When a fuse box is exposed, take care to protect the box from moisture. Refit the cover and/or access panel as soon as possible.

1. To access the luggage compartment fuse boxes, open the tailgate. See **8, OPENING AND CLOSING THE TAILGATE** Grip the top of the access panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
 - When refitting the access panel, make sure that the 3 locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
2. Luggage compartment upper fuse box.
3. Luggage compartment lower fuse box.
4. To access the passenger compartment fuse box open the glove box. See **91, STORAGE COMPARTMENTS** Press the top of the support stay at each end and lower the glove box into the foot well. A label on the rear of the glove box shows the circuits protected and the fuse locations.
5. To access the engine compartment fuse box remove the under bonnet cover. See **199, UNDER BONNET COVERS - REMOVAL** Release the clip at each end of the fuse box cover.
6. Lift up the edge of the leaf screen panel just enough to allow removal of the fuse box cover.
7. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

CHANGING A FUSE



Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.



If the replacement fuse blows after installation, the system should be checked by your Land Rover Dealer/Authorised Repairer.

Note: Land Rover recommend that relays should only be replaced by qualified persons.

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	25	White	Engine management system.
2	15	Blue	Engine management system.
3	20	Yellow	Oxygen sensors. (petrol only).
4	10	Red	Cooling Fans. (petrol only).
5	-	-	-
6	10	Red	Engine management system. (diesel only).
7	15	Blue	Engine management system. (diesel only).
	10	Red	Engine management system. Cooling fan. (petrol only).
8	15	Blue	Engine management system. Cooling fan. (diesel only).
9	15	Blue	Engine management system. Oxygen Sensor. Glow Plugs. (diesel only).
	5	Tan	Engine management system. (petrol only).
10	20	Yellow	Oxygen sensors. (petrol only).
11	20	Yellow	Oxygen sensors. (petrol only).
12	5	Tan	Adaptive cruise control (ACC). Active cornering enhancement (ACE).
13	-	-	-
14	5	Tan	Engine management system. (petrol only).
15	-	-	-
16	5	Tan	Electric power assist steering (EPAS).
17	15	Blue	Active cornering enhancement (ACE).
18	5	Tan	Anti-lock braking system (ABS).
19	15	Blue	Intercooler water pump. (petrol only).
20	5	Tan	Engine management system. (petrol only).
21	30	Green	Headlamp wash.
22	-	-	-
23	-	-	-
24	15	Blue	Horns.
25	-	-	-

Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
26	-	-	-
27	-	-	-
28	10	Red	Heated washer jet.
29	-	-	-
30	15	Blue	Transmission. Terrain response.

PASSENGER COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	5	Tan	Radio frequency receiver. Tyre pressure monitoring system (TPMS). Auxiliary heater. Front roof console.
2	-	-	-
3	15	Blue	Front fog lamps.
4	-	-	-
5	5	Tan	Tow bar module.
6	5	Tan	Ignition relay.
7	20	Yellow	Sunroof.
8	10	Red	Message centre module.
9	5	Tan	Electric parking brake (EPB).
10	5	Tan	Front active seatbelts.
11	10	Red	Trailer reverse lamp.
12	-	-	-
13	-	-	-
14	5	Tan	Brake switch.
15	30	Green	Heated rear screen. Radio frequency filter.
16	10	Red	Cubby box cooler.
17	5	Tan	Keyless vehicle module (KVM).
18	-	-	-
19	5	Tan	Engine control module (ECM).
20	10	Red	Heated steering wheel.
21	10	Red	Front roof console. Seat climate control.

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
22	5	Tan	Rotary gear selector. Automatic transmission control module. Transfer box. Rear differential. Terrain response switch.
23	5	Tan	Ambient lighting.
24	-	-	-
25	-	-	-
26	-	-	-
27	10	Red	Trailer side lamps.
28	20	Yellow	Sunroof.
29	20	Yellow	Sunroof.
30	-	-	-
31	5	Tan	Rain sensor. Ambient light sensor.
32	25	White	Driver's door.
33	20	Yellow	Dual climate seats.
34	10	Red	Electric fuel flap actuator.
35	-	-	-
36	5	Tan	Battery back-up sounder.
37	20	Yellow	Keyless vehicle module (KVM).
38	15	Blue	Front screen washer.
39	25	White	Rear left door.
40	5	Tan	Touch screen display. Driver's door switch pack. Rear climate control.
41	5	Tan	Gateway module.
42	30	Green	Driver's electric seat.
43	15	Blue	Rear screen washer.
44	25	White	Rear right door.
45	30	Green	Passenger's electric seat.
46	30	Green	Driver's electric seat.
47	10	Red	Passenger's electric seat.
48	5	Tan	Electric deployable tow bar.
49	5	Tan	Adaptive front lighting (right-sidehand unit).
50	5	Tan	Adaptive front lighting (left-side unit).
51	5	Tan	Steering wheel switches.

Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
52	20	Yellow	Auxiliary power socket-cubby box.
53	15	Blue	Auxiliary power socket-luggage compartment.
54	15	Blue	Auxiliary power socket-rear (right-side).
55	20	Yellow	Auxiliary power socket-rear (left-side).
56	10	Red	Supplementary restraint systems (SRS).
57	10	Red	Glove box lamp. Front roof console lamps. Windscreen misting sensor.
58	25	White	Passenger door.
59	-	-	-
60	5	Tan	Seat occupancy module.
61	5	5	Immobiliser antenna unit.
62	10	Red	Climate control module.
63	20	Yellow	Front cigar lighter.
64	-	-	-
65	-	-	-
66	5	Tan	Diagnostic socket.
67	-	-	-
68	-	-	-
69	-	-	-

LUGGAGE COMPARTMENT FUSE BOX

Upper box

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	-	-	-
2	25	White	Front heated seat.
3	25	White	Rear heated seat.
4	15	Blue	Rear seat. Torch socket.
5	15	Blue	Trailer.
6	15	Blue	Fuel pump (V8 diesel only).
7	5	Tan	Chassis control module.
8	15	Blue	Front seat.
9	20	Yellow	Rear wiper motor.
10	5	Tan	Breather heater (diesel only).
11	-	-	-
12	-	-	-
13	-	-	-
14	10	Red	Headlamps. Park distance control. Blind spot monitoring. Rear view mirror. Proximity camera.
15	15	Blue	Fuel pump (diesel only).
	30	Green	Fuel pump (petrol only).
16	5	Tan	Adaptive cruise control (ACC).
17	30	Green	Passenger front seat.
18	30	Green	Rear blower motor.
19	30	Green	Electric park brake (EPB).
20	10	Red	Chassis control module.
21	30	Green	Electric park brake (EPB).
22	15	Blue	Trailer.
23	15	Blue	Chassis control module.
24	20	Yellow	Rear climate seats.
25	30	Green	Deployable sidesteps.
26	20	Yellow	Rear climate seats.
27	30	Green	Rear seat (left-side).
28	30	Green	Rear seat (left-side).

Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
29	30	Green	Rear seat (right-side).
30	30	Green	Rear seat (right-side).

Lower box

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	15	Blue	Touch screen. Front integrated control panel.
2	10	Red	Audio amplifier.
3	-	-	-
4	10	Red	Digital radio. Navigation. Television tuner.
5	15	Blue	Audio head unit.
6	15	Blue	Audio video input/output panel.
7	-	-	-
8	-	-	-
9	-	-	-
10	-	-	-
11	-	-	-
12	-	-	-
13	-	-	-
14	-	-	-
15	10	Red	Front and rear integrated control panels.
16	20	Yellow	Fuel fired booster heater.