


## REAR MEDIA CONTROL FROM THE TOUCH SCREEN

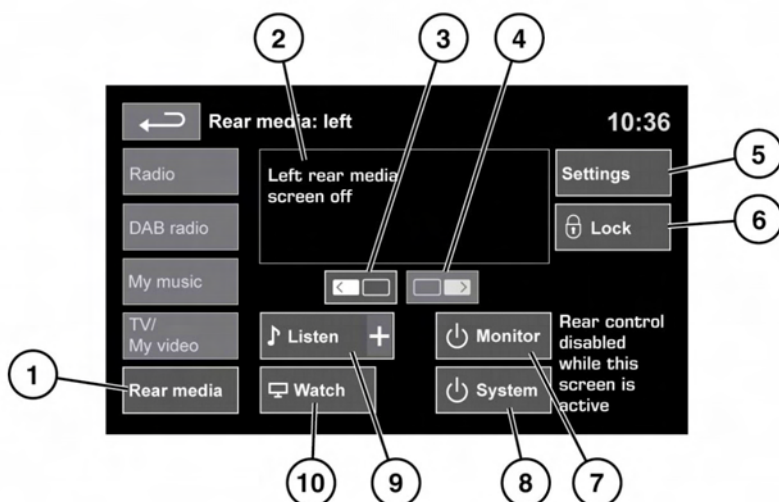


E142716

1. Select rear media.
2. Current media display.
3. Left screen select.
4. Right screen select.
5. Settings screen.
6. Remote control lock.
7. Turns the selected screen on/off.
8. Rear media on/off, for the selected user.
9. Audio source select.
10. Video source select.

**Note:** When the main rear media control screen is displayed on the touch screen, the rear media remote control will be locked out.

### REAR MEDIA REMOTE CONTROL

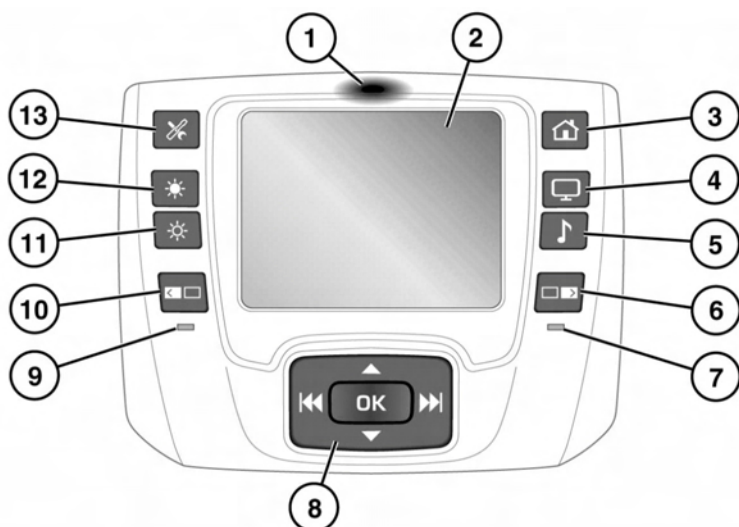

E141080

**Note:** The rear media remote control communicates via infra-red and must be pointed towards the receiver in the rear screen.

1. Press to undock remote control.



Do not press the touch screen to undock the remote control.

2. Touch screen.

3. Home screen.

4. Video source.

5. Audio source.

6. Right screen select.

7. Right screen tell-tale. Illuminates when right screen has been selected.

8. Cursor movement and option select buttons.

9. Left screen tell-tale. Illuminates when left screen has been selected.

10. Left screen select.

11. Touch screen brightness decrease.

12. Touch screen brightness increase.

13. Touch screen settings.

### REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and TV **Parental Control** to be turned on or off, and the TV **Age Warning** threshold to be set.

When **Limousine Mode** is on, the rear passengers will have control of the total cabin audio system via the remote control.


When TV **Parental Control** is on and the age limit is set, a message is sent to the Rear users screen if the content is unsuitable.



It remains the responsibility of the parent or guardian, even with parental control on, to ensure that the content is suitable for viewing by children.

## USING RSE

The Rear seat entertainment system is operated using the remote control. The remote is removed from the arm rest by pressing the top of the remote to unlatch it.

 Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.



Use the left/right screen select keys on the rear media remote control, or the front touch screen controls, to allow further options to be set and selected.

**Note:** A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.

## HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

## REAR MEDIA REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery should only be changed or removed by a Land Rover Dealer/Authorised Repairer.