


FUSE BOX LOCATIONS

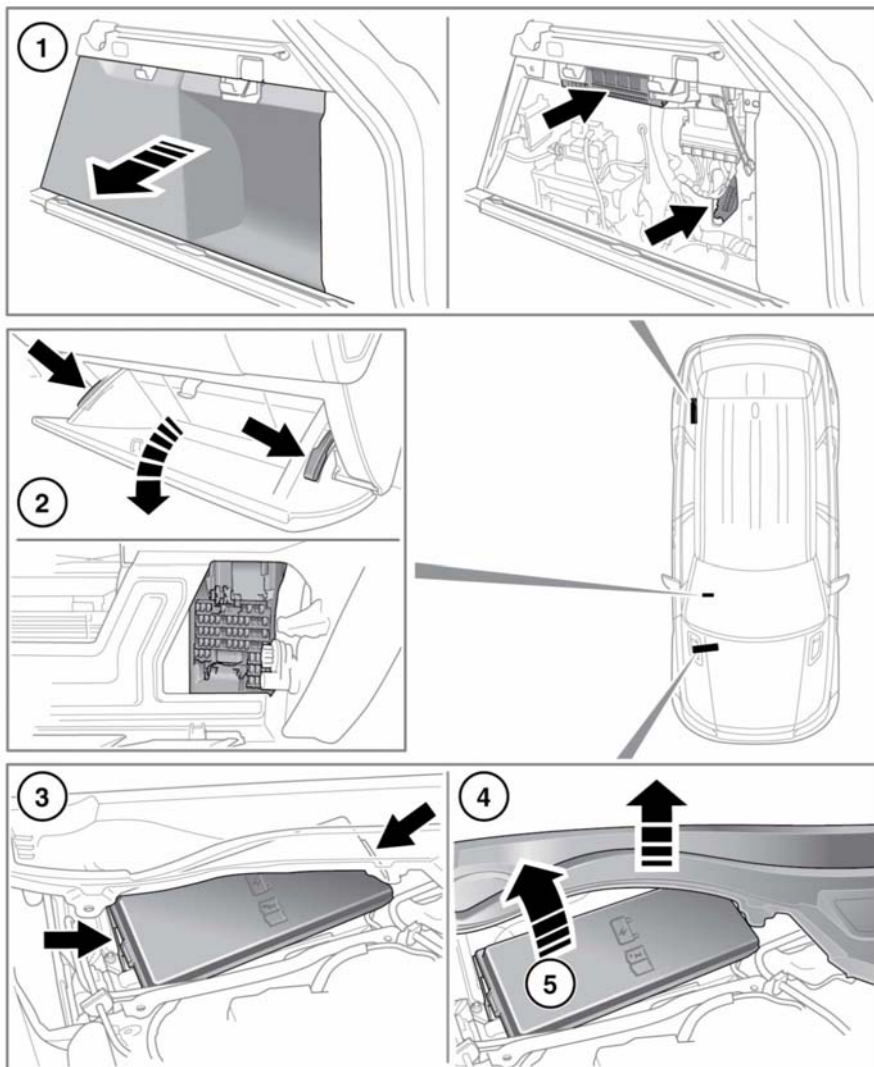

E151912

NOTICE

When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

1. To access the upper and lower luggage compartment fuse boxes, open the rear tailgate. See **13, OPENING AND CLOSING THE POWERED TAILGATE** Remove the first access panel. Grasp the top of the panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
 - When refitting the access panel, make sure the locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
2. To access the passenger compartment fuse box open the glove box. See **88, STORAGE COMPARTMENTS** Firmly press the top of the support stay at each end, and lower the glove box into the foot well. A label on the rear of the glove box shows the circuits protected and the fuse locations.
3. To access the engine compartment fuse box remove the under hood cover. See **195, UNDER HOOD COVERS - REMOVAL** Release the clip at each end of the fuse box cover.
4. Lightly lift up the leaf screen panel to allow the removal of the fuse box cover.
5. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

CHANGING A FUSE

NOTICE

Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

NOTICE

If the replacement fuse blows after installation, the system should be checked by your Land Rover Retailer/Authorized Repairer.

Note: Land Rover recommend that relays should only be replaced by qualified persons.

NOTICE

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	25	White	Engine management system.
2	15	Blue	Engine management system.
3	20	Yellow	Oxygen sensors.
4	10	Red	Cooling fans.
5	-	-	-
6	-	-	-
7	10	Red	Engine management system.
8	5	Tan	Digital Monitoring Tank Leakage (DMTL).
9	5	Tan	Engine management system.
10	20	Yellow	Oxygen sensors.
11	20	Yellow	Oxygen sensors.
12	5	Tan	Adaptive cruise control (ACC). Active cornering enhancement (ACE).
13	10	Red	Exhaust valve.
14	5	Tan	Engine management system.
15	30	Green	Intelligent Stop/Start.
16	5	Tan	Electric power assist steering (EPAS).
17	15	Blue	Active cornering enhancement (ACE).
18	5	Tan	Anti-lock braking system (ABS).
19	15	Blue	Charge air cooling pump (supercharged vehicles only).
20	5	Tan	Engine management system.
21	30	Green	Headlamp wash.
22	-	-	-
23	-	-	-
24	15	Blue	Horns.
25	30	Green	Rear seats.
26	-	-	-

Fuses

Fuse number	Rating (Amps)	Fuse color	Circuits protected
27	-	-	-
28	10	Red	Heated washer jet.
29	-	-	-
30	15	Blue	Transmission. Terrain response.

PASSENGER COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	5	Tan	Radio frequency receiver, Tire pressure monitoring system (TPMS). Auxiliary heater. Front roof console.
2	-	-	-
3	15	Blue	Front fog lamps.
4	-	-	-
5	5	Tan	Tow bar module.
6	5	Tan	Ignition relay.
7	20	Yellow	Sunroof. Sunblind.
8	10	Red	Message Center.
9	5	Tan	Electric parking brake (EPB).
10	5	Tan	Front active seatbelts.
11	10	Red	Trailer reverse lamp.
12	-	-	-
13	-	-	-
14	5	Tan	Brake switch.
15	30	Green	Heated rear screen. Radio frequency filter.
16	10	Red	Cubby box cooler.
17	5	Tan	Keyless vehicle module (KVM).
18	-	-	-
19	5	Tan	Engine control module (ECM).
20	10	Red	Heated steering wheel.
21	10	Red	Hill descent switch. Dynamic stability control switch, Seat climate control. Passenger air bag disable lamp.
22	5	Tan	Gear selector. Automatic transmission control module. Transfer box, Rear differential. Terrain response switch.
23	5	Tan	Interior lights.
24	-	-	-

Fuses

Fuse number	Rating (Amps)	Fuse color	Circuits protected
25	-	-	-
26	-	-	-
27	10	Red	Trailer side lamps.
28	20	Yellow	Sunroof. Sunblind.
29	-	-	-
30	-	-	-
31	5	Tan	Rain sensor. Ambient light sensor.
32	25	White	Driver's door.
33	20	Yellow	Dual climate seats.
34	10	Red	Electric fuel flap actuator.
35	-	-	-
36	5	Tan	Battery back-up sounder.
37	20	Yellow	Keyless vehicle module (KVM).
38	15	Blue	Front screen washer
39	25	White	Rear left door.
40	5	Tan	Touch screen display. Driver's door switch pack. Rear climate control.
41	5	Tan	Gateway module.
42	30	Green	Driver's electric seat.
43	15	Blue	Rear screen washer.
44	25	White	Rear right door.
45	30	Green	Passenger electric seat.
46	30	Green	Driver's electric seat.
47	10	Red	Passenger's electric seat.
48	-	-	-
49	5	Tan	Adaptive front lighting (right side unit).
50	5	Tan	Adaptive front lighting (left side unit).
51	5	Tan	Steering wheel switches.
52	20	Yellow	Auxiliary power socket cubby box.
53	15	Blue	Auxiliary power socket luggage compartment.

Fuse number	Rating (Amps)	Fuse color	Circuits protected
54	15	Blue	Auxiliary power socket rear (right side).
55	20	Yellow	Auxiliary power socket rear (left hand).
56	10	Red	Supplementary restraint systems (SRS).
57	10	Red	Glove box lamp. Front roof console lamps. Windshield fogging sensor.
58	25	White	Passenger door.
59	10	Red	Powered tailgate open/close latch.
60	5	Tan	Seat occupancy module.
61	5	Tan	Immobiliser antenna unit.
62	10	Red	Climate control module.
63	20	Yellow	Front cigar lighter.
64	-	-	-
65	-	-	-
66	5	Tan	Diagnostic socket.
67	-	-	-
68	-	-	-
69	-	-	-

LUGGAGE COMPARTMENT FUSE BOX

Fuse box (upper)

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	-	-	-
2	25	White	Heated front seat. Climate front seat.
3	25	White	Heated rear seat. Climate rear seat.
4	15	Blue	Heated rear seat. Flash light socket.
5	15	Blue	Trailer.
6	-	-	-
7	5	Tan	Chassis control module.
8	15	Blue	Front seat.
9	20	-	-
10	-	-	-
11	-	-	-
12	-	-	-
13	-	-	-
14	10	Red	Headlamps. Parking aid. Blind spot monitoring. Rear view mirror. Proximity camera.
15	30	Green	Fuel pump.
16	5	Tan	Adaptive cruise control (ACC).
17	30	Green	Passenger front seat.
18	30	Green	Rear blower motor.
19	30	Green	Electric park brake (EPB).
20	10	Red	Chassis control module.
21	30	Green	Electric park brake (EPB).
22	15	Blue	Trailer.
23	15	Blue	Chassis control module.
24	15	Blue	Event data recorder. Vehicle tracker.
25	30	Green	Deployable sidesteps.
26	20	Yellow	Rear wiper.

Fuse number	Rating (Amps)	Fuse color	Circuits protected
27	30	Green	Rear seat (left-side).
28	30	Green	Rear seat (left-side).
29	30	Green	Rear seat (right-side).
30	30	Green	Rear seat (right-side).

Fuse box (lower)

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	15	Blue	Touch screen. Front integrated control panel.
2	10	Red	Audio amplifier.
3	-	-	-
4	10	Red	Satellite digital audio radio service (SDARS). Navigation. Television tuner.
5	15	Blue	Audio head unit.
6	15	Blue	Audio video input/output panel.
7	-	-	-
8	-	-	-
9	-	-	-
10	-	-	-
11	-	-	-
12	-	-	-
13	-	-	-
14	-	-	-
15	15	Blue	Front integrated control panel. Rear integrated control panel. Heating and ventilation.
16	20	Yellow	Fuel fired booster heater.