


## USING THE PARKING AID

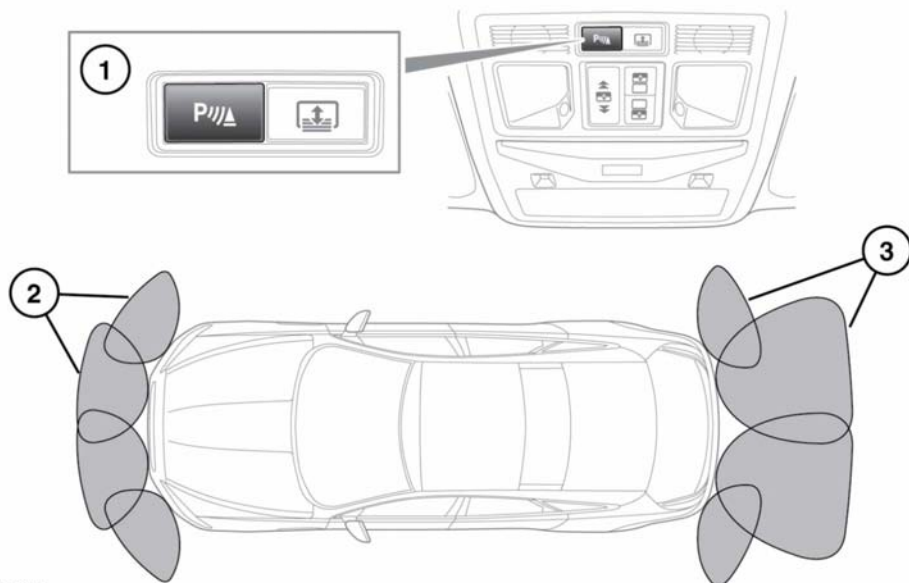

E 152430

### **⚠ WARNING**

The Parking aid system is not a substitute for driving safely with due care and attention. Drivers should not assume that this feature will correct errors of judgement while driving.

### **⚠ WARNING**

Parking aids may not detect moving objects, such as children and animals until they are dangerously close. Always exercise extreme caution when maneuvering and always use the mirrors.

### **⚠ WARNING**

It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them. Some overhanging objects, barriers, small children, animals, thin obstructions or painted surfaces may not be detected by the system.

### **⚠ WARNING**

The Parking aid system may not function under all speeds, weather and road conditions.

### **NOTICE**

*If accessories are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.*

1. Parking aid switch: Press to turn on and off.

# Parking aids

2. Front detection range.

3. Rear detection range.

When Reverse (**R**) gear is selected, the front and rear parking sensors are activated automatically, and the switch indicator will illuminate.

To manually activate the front sensors press the parking aid switch, the switch indicator will illuminate.

To turn off the system when active, press the switch, the switch indicator will extinguish.

The range of the parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 10 mph (16 km/h).

Selecting **N** from **R** will keep front and rear sensors active.

When Parking aid is active a pop-up appears on the Touch screen showing a plan view of the vehicle and the immediate surrounding area.

Touch the screen to cancel the view.

**Note:** *If a rear camera is fitted, when Reverse (**R**) is selected, the camera display is selected automatically. To view the parking aid display, touch the screen.*

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 12 inches (300 mm).

**Note:** *The front parking aid provides an audible proximity warning when driving forwards and when reversing.*

## CLEANING THE SENSORS

### **NOTICE**

*When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.*

The sensors should be kept clean to maintain accuracy and performance.

## PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/Authorized Repairer as soon as possible.

## PARKING AID VOLUME


To set the volume of the parking aid warning tones:

- Select **Setup** on the Touch screen Home menu, then select **System**.
- Select **Volume presets**, then use the + or - soft keys alongside Parking aid to adjust volume for both front and rear warning tones.

## REAR CAMERA

### **⚠️ WARNING**



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.

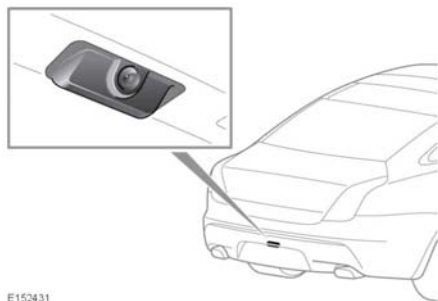

E152431

The rear camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

When reverse gear is selected, the screen automatically displays a wide angle, color image from the rear of your vehicle.

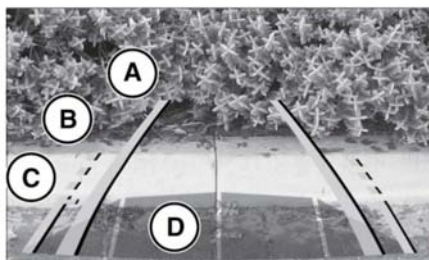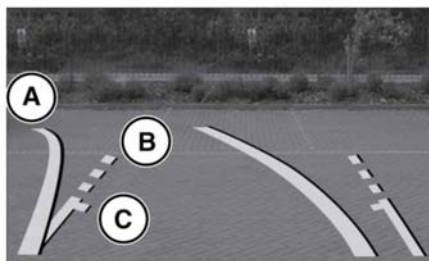

E142176

- A.** Solid line: The projected wheel trajectory.
- B.** Dotted line: The safe working width of the vehicle (including exterior mirrors).
- C.** Trunk access guidelines: Do not reverse past this point if access to the trunk is required.
- D.** Parking aid sensor activation: a colored area appears to indicate which rear sensor(s) is active.

### **NOTICE**

*Some overhanging objects or barriers which could cause damage to the vehicle may not be detected by the camera.*

The rear view camera display on the Touch screen will discontinue when either of the following apply:

- Drive **(D)** is selected for longer than 15 seconds.
- Drive **(D)** is selected and/or vehicle speed is greater than 11 mph (18 km/h).