

Instrument panel

RANGE

This shows the predicted distance (miles or kilometers) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

IMPERIAL/METRIC/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial, and mixed units in the Trip Computer menu of the Message center. See **48, INSTRUMENT PANEL MENU**.

Note: *Temperature display can be changed between °F (Fahrenheit) and °C (Celsius) independently of imperial or metric units.*

SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message center, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.