

8. Press to select the **Home menu**.
9. Press to display the audio settings. When proximity cameras are fitted, this icon is changed and the button will turn the cameras on/off.
10. Press to turn the screen on/off.
11. Press to select the **Extra features** menu.
12. To change the shortcuts, see **73, TOUCH SCREEN SETUP**.

## TOUCH SCREEN USE

### **WARNING**

**Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.**

### **NOTICE**

*Always run the engine during prolonged use of the Touch screen. Prolonged use will cause the battery to discharge.*

### **NOTICE**

*Do not use excessive pressure when selecting items on the Touch screen.*

### **NOTICE**

*Avoid spilling or splashing liquids onto the Touch screen.*

## TOUCH SCREEN CARE

### **NOTICE**

*Do not use abrasive cleaners to clean the Touch screen. For approved screen cleaners, contact your Retailer/Authorized Repairer.*

## TOUCH SCREEN SETUP

Select **Set-up** from the **Home menu**.

The setup screen is divided into categories:

- Screen.
- System.
- Voice.
- Audio.

## SCREEN SETTINGS

**Volume pop-up:** Display Volume pop-up on/off.

**Screensaver:** Change screensaver.

**Time out home:** Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.

**Theme:** Changes appearance of the Touch screen soft keys.

## SYSTEM SETTINGS

**Button feedback:** Select to turn the soft key confirmation tone on/off.

**Clock adjust:** Select the 12 or 24 hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set** to store new settings.

**Note:** *The clock can also be adjusted from the Touch screen time display.*

**Home menu shortcuts:** Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

**Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

**Note:** *Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

**Volume presets:** Adjust the volume for the available systems (announcements, parking aid, phone, voice, etc.).