

PORTABLE MEDIA CONTROLS

⚠ WARNING

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

⚠ WARNING

Make sure that any auxiliary devices are stored securely while the vehicle is in motion. Any loose objects are potential hazards during sudden maneuvers, emergency braking, or accidents.

⚠ WARNING


Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

NOTICE

Do not place any item connected to the auxiliary input socket or the auxiliary power socket on the seats, carpets, or other upholstery. The heat generated by these devices may cause damage to the vehicle and, in some extreme cases, a fire.

NOTICE

Read the manufacturer's instructions for any device, before it is connected to the Audio system.

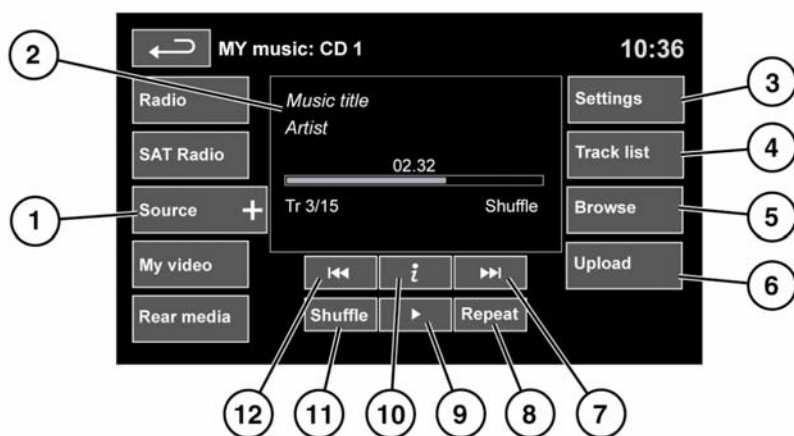

E151175

See 118, **AUDIO/VIDEO CONTROLS**.

My music includes CD, iPod, USB, AUX and Bluetooth® wireless technology devices. The full infotainment system also includes Stored CD.

1. Touch the **Source** icon to display all of the options. Select an option.

Note: Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.

2. Display of information about the current track, including elapsed run-time. Some of this information is also displayed in the Instrument panel.

Note: Only connected devices that support ID3 shall have the information displayed.

3. **Settings:** For MP3 recorded media, you can select the number of list entries that are skipped, when you use the page up/down arrows when navigating a list.
4. **Track list:** Select to view the current CD or the Stored CD track list. Select a track to start playback.
5. **Browse:** (iPod, USB and Stored CD modes only).
 - Select to view the contents of the connected device, which are displayed as dictated by the file structure.
 - Select a file to start playback (Browse view will remain). Select a folder or subfolder to view their contents.
 - To return to the **My music** menu, select the Back soft key.

Note: If the iPhone is connected via a USB cable, so that audio can be played or for phone charging, **Bluetooth®** wireless technology devices audio is disconnected.

6. **Upload:** Applicable to Stored CD menu only. Select to view and manage the CDs loaded onto the CD store.
 - Select **Upload** alongside an empty slot to upload the current CD. There are 10 slots available.
 - If the CD store is full, select **Replace** to overwrite an existing CD.

In each case, a confirmation pop-up will appear. Select **Yes** to continue.

Note: Loading time is dependent on content type. A % count up is displayed. Other features can be selected while upload is in progress.

7. Skip/Scan forward:

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

8. Repeat:

In **CD** mode:

- Touch and release to repeat the current track continuously until Repeat mode is canceled. **Repeat track** is displayed.
- Touch and release again to repeat the current Stored CD (or folder for MP3 discs) continuously until Repeat mode is canceled. **Repeat disc** or **Repeat folder** is displayed.
- Touch and release a third time to cancel Repeat mode.

Note: Selecting **Shuffle** will cancel Repeat mode, but **Repeat track** can be selected with Shuffle mode active (cancels the previously selected Shuffle mode).

In **USB** or **iPod** mode:

- Select to repeat the current track.
- Select again to repeat the current folder (USB) or to cancel Repeat mode (iPod). Select again to cancel Repeat mode in USB.

Note: Repeat mode is not available for **Bluetooth®** wireless technology devices.

Note: Selecting **Shuffle** will cancel Repeat mode.

9. **Pause/Play:** Select to pause playback. Select again to resume playback.
10. **Information:** More information about the current track.
11. **Shuffle:**