
## **EXTERIOR MIRRORS**

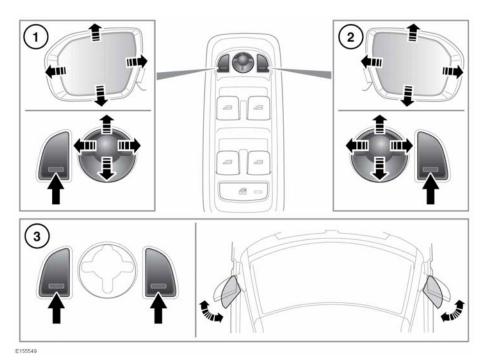

- 1. Left mirror adjustment.
- 2. Right mirror adjustment.
- **3.** Press both switches together to fold/unfold the mirrors.

**Note:** If the mirrors are manually folded or knocked into the folded position accidentally, the mirror head will be loose. To re-engage the mechanism, fold, then unfold the mirrors using the switches.

A thermal cut-out will temporarily disable the powerfold feature if the switches are operated repeatedly.

Powerfold will only operate if the vehicle is stationary, or traveling at 12 mph (20 km/h) or less.



The mirrors can be configured by your Retailer/Authorized Repairer to automatically fold when the vehicle is locked, and unfold when it is unlocked.

**Note:** If the mirrors were folded using the switches, they will not unfold when the vehicle is unlocked.

## MIRROR DIP WHEN REVERSING

Selecting Reverse (R) gear will cause the door mirrors to automatically adjust, providing an improved viewing angle for reversing.

## **Mirrors**

The exact dipped position can be adjusted when the mirrors are dipped. The next time (**R**) is selected, the newly adjusted position will be selected.

When the gear selector is moved out of  $(\mathbf{R})$ , the mirrors will return to their previous position.

**Note:** If the vehicle's speed exceeds 4 mph (7 km/h) in reverse, the mirrors will return to their normal driving position for enhanced visibility.

The automatic Mirror dip feature can be enabled or disabled from the Vehicle Set-up menu. See **48, INSTRUMENT PANEL MENU**.