

Navigation system

2. Touch the **Auto zoom** soft key. The soft key will be highlighted when auto zoom is enabled.

Note: *The highest level to which the map will zoom out, is the scale value set before the **Auto Zoom** feature is switched on.*

SCREEN MODES

Touch the screen mode selection key to view a series of icons, each depicting a different screen mode (as detailed below). Touch the relevant icon to select the desired screen mode.



Full screen view.



Split screen view.



Shows a list of turn directions on the right half of the screen.



Guidance screen: Shows a detailed view of the next intersection on the highway, or the intersection view on non-highway roads, in the right half of the screen.



Highway information: This view is only available when traveling on a highway. It displays automatically to show the remaining highway exits along your route, or all exits on the current highway when a route is not set.

To turn off the Guidance or Highway information screens, proceed as follows:

1. From the **Nav menu**, touch **More....**
2. Select **Nav set-up**.
3. Touch **User settings**.
4. Touch **Guidance screen** or **Highway information** to deselect the option.

5. Touch **Ok** to confirm.

STATE

The navigation map database is divided into states, provinces and territories, called states. When setting a route, the destination (or waypoint) being entered, must be in the currently selected state.

Before attempting to set a destination or waypoint, set the correct state as follows:

1. Select **Destination entry** from the main navigation menu.
2. Touch **More....**
3. Touch **State**.
4. Scroll through the list and select the 2 or 3 letter code that corresponds to the desired destination area.
5. Select **Ok**. The Destination entry menu is shown and the information window shows the currently selected state.

SETTING A DESTINATION

1. After touching **Continue**, the initial map screen is displayed, now touch **Nav menu**.
2. From the Navigation Menu, touch **Destination entry**.

Note: *In addition to being available in the main map view, the Destination entry button is also available in the Home menu.*

3. Touch **Address** from the **Destination** screen and input the town name or zipcode.
4. Once sufficient letters have been entered, touch **Ok** or **List** to display all of the possible towns.
5. If necessary, use the scroll arrows to the left of the list to search up or down. Select the town you require.