

7. When the vehicle's **Bluetooth®** wireless technology system is discovered, follow the on-screen instructions. Select **Yes** when prompted, to confirm the pairing. Either your device or the vehicle's system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.

8. Enter the same PIN into the other device.

9. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music, Bluetooth** screen.

Note: Some media players do not automatically connect and need to be manually connected, via the device or by using the **Change device** option.

PORTABLE MEDIA PAIRING AND CONNECTING USING THE TOUCH SCREEN

For further information on **Bluetooth®** wireless technology, see **145, BLUETOOTH® INFORMATION**.

1. Switch on your **Bluetooth®** wireless technology device connection. Make sure that it is in **Bluetooth®** wireless technology device discoverable mode, sometimes referred to as 'find me' mode (see your device's operating instructions for more information).
2. Switch on the ignition and make sure the Touch screen is active.
3. From the **Home menu**, select **Audio/Video**, then **My music**.
4. Touch **Bluetooth**.
5. A menu will appear. Select **Change device**.
6. Select **Vehicle to device**.

7. Identify your device from the displayed list and select the corresponding **Pair and connect** option.

Note: If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.

8. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
9. Once your device is connected to the system, a confirmation message will be displayed, before switching to the **My music, Bluetooth** view.

Note: Due to the duration of a **Bluetooth®** wireless technology device search, it is advised that the time out to home screen feature is switched off before attempting to search for **Bluetooth®** wireless technology devices. This setting can be changed within **Set-up, Screen, Time out home**.

CHANGING/DISCONNECTING A DEVICE

1. From the **Bluetooth** menu, select **Change device**.
2. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.