

GARAGE DOOR TRANSCIVER

CAUTION

Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature as required by safety standards.

CAUTION

When programing the transceiver to a garage door opener or entry gate, make sure the area is clear. This will prevent potential harm or damage as the gate or garage door will activate during the program.

NOTICE

This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter as well as the in-car transceiver.

The door transceiver is located in the rear-view mirror. It can be programed to transmit the Radio Frequencies (RFs) of up to 3 different transmitters, which can be used to operate garage doors, entry gates, home lighting, security systems, or other Radio Frequency (RF) operated devices.

Although this section mainly describes the procedures for a garage door opener, it equally applies to the previously mentioned applications.

In some countries, this feature is also known as the HomeLink® Universal Transceiver. The transceiver RF approval numbers for the USA and Canada are shown below:

USA and Puerto Rico - FCC ID: NZLJLRHL4.

Canada - CAN: 4112A-JLRHL4.

Note: HomeLink® is a registered trademark owned by the Johnson Controls, Inc. Milwaukee, Wisconsin.

For further information, see **69, INFORMATION AND ASSISTANCE.**

United States of America

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Canada

IC - RSS-210

Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Note: Changes or modifications not expressly approved by the manufacturer could void the user's authority to use the equipment.

BEFORE PROGRAMMING

NOTICE

When programming a device that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.

For the best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programming. If your garage door opener receiver (located in the garage) is equipped with an antenna, make sure that the antenna is hanging straight down.