


AUDIO/VIDEO CONTROLS

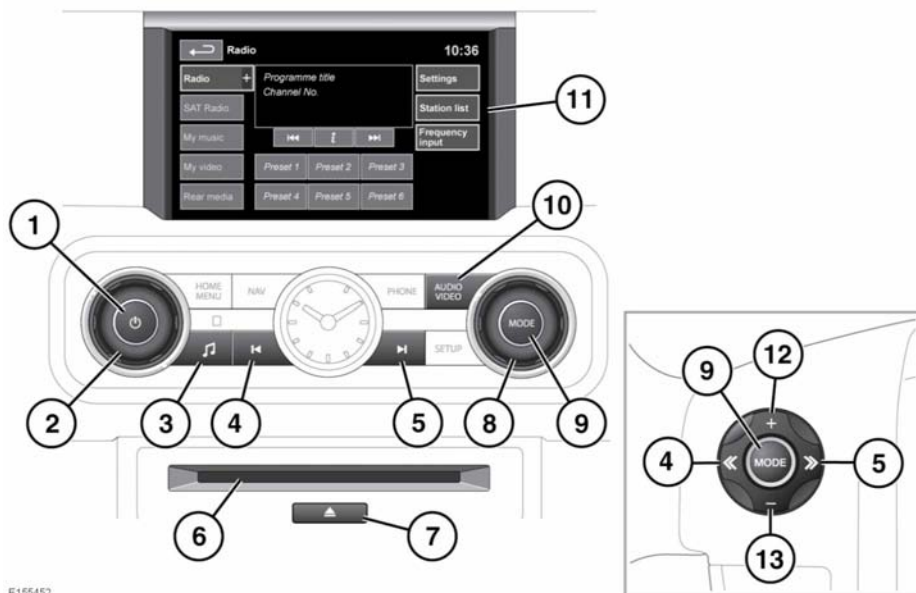

E155452

⚠ WARNING

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

⚠ WARNING

Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. Press to switch the Audio system on/off.

Note: The Audio system will operate with the ignition on or off, but will always switch off when the ignition is switched off. Switch the Audio on again, if required.

2. Rotate to adjust the volume level.

Note: If the volume is turned to zero while a Compact Disc (CD) is playing, the CD will pause play. Play will resume when a greater volume is selected.

3. Press to display the Audio settings. When proximity cameras are fitted, this icon is changed and the button will turn the cameras on/off.
4. Seek down:
Short press:
 - To select the previous radio preset.
 - To select the previous track, or the start of the current track on chosen the audio source - CD, MP3, etc.
 - When the telephone is in use, press to scroll down lists of calls or phonebook entries.
 - To select the previous DVD chapter.