


7 seat vehicles: The tool kit is stowed behind an access cover in the loadspace area.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

REMOVING THE SPARE WHEEL

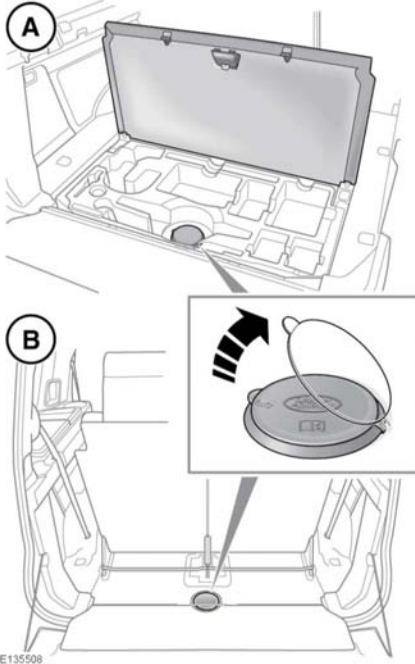

⚠ WARNING

Remove the spare wheel prior to jacking the vehicle, to avoid destabilizing the vehicle when raised.

The spare wheel is heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or maneuvering the wheels.

Note: Before removing the spare wheel, take note of its stowage position. The wheel to be changed must be correctly stowed in its place.

On 5 seat vehicles (A):

- Open the rear loadspace floor panel.
- Remove the cover for access to the spare wheel hoist winch spindle.
- Remove all of the tools from the vehicle's tool kit. See **218, TOOL KIT**.

On 7 seat vehicles (B):

- Behind the 3rd row seats, remove the cover for access to the spare wheel hoist winch spindle.
- Remove all of the tools from the vehicle's tool kit. See **218, TOOL KIT**.