


USED ENGINE OIL

Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.



It is illegal to pollute drains, water courses, or soil. Use authorized waste disposal sites to dispose of used oil and toxic chemicals.

OPENING THE HOOD

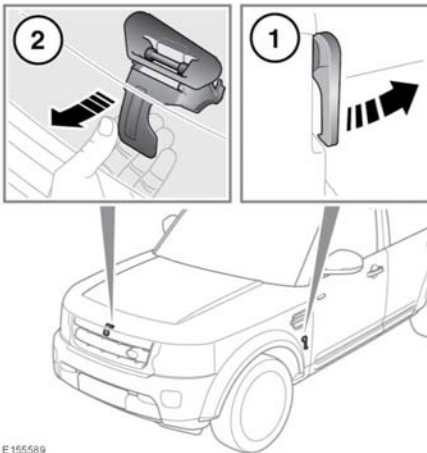

E155589

1. Pull the hood release lever, located in the left side front footwell.
2. Lift the hood safety catch lever, located below the center point of the hood, then raise the hood.


CLOSING THE HOOD

⚠ WARNING

Do not drive with the hood secured by the safety catch alone.

1. Lower the hood until the safety catch engages. Using both hands, press the hood down until the catches click.
2. Check that both catches are engaged, by trying to lift the front edge of the hood.

UNDER HOOD COVERS - REMOVAL

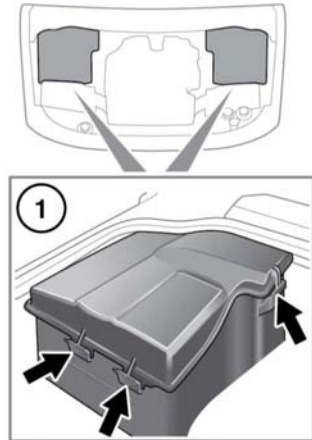

E134967

1. Press the tabs to release the cover from the casing.
Note: Releasing the inboard tab on the front edge of the cover first will make it easier to release the remaining tabs.
2. Lift the front edge of the cover and slide forwards to remove.

UNDER HOOD COVERS - REFITTING

NOTICE

Before refitting the under hood covers, make sure that no pipes, cables, or other items, have been trapped between the cover and the casing.

1. Slide the rear edge of the cover under the rubber trim fitted to the scuttle panel.