



## FRONT FOG LAMP BULB REPLACEMENT

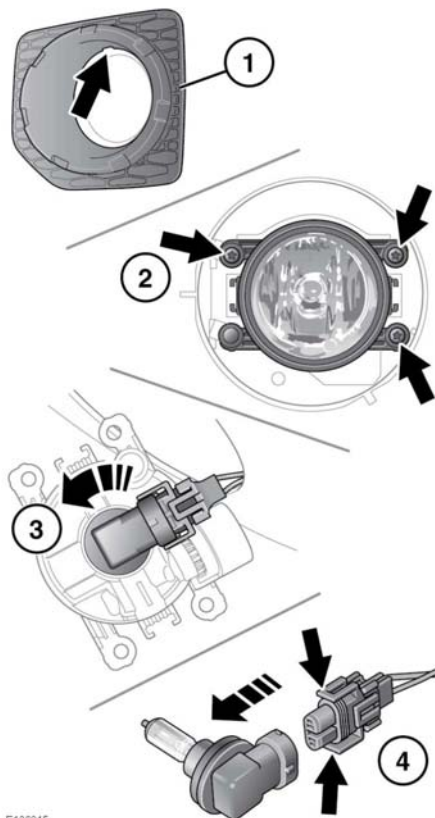

E136815

1. Using the slot at the top of the lamp surround, lever out with a suitable implement to remove.
2. Undo the 3 retaining screws, and remove the lamp unit.
3. Rotate the bulb holder counter-clockwise, and remove it from the lamp unit.
4. Press the 2 clips together, and remove the electrical connector.

## TURN SIGNAL BULB REPLACEMENT

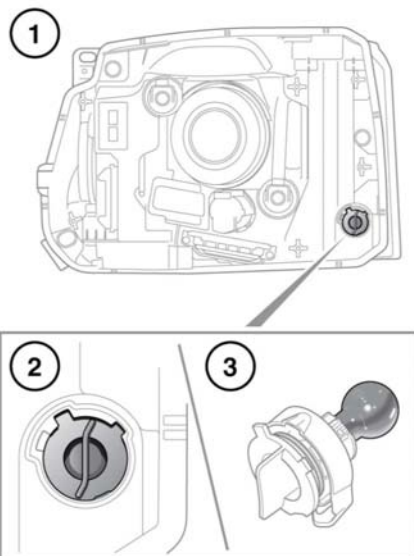

E156703

**Note:** The turn signal bulb location is dependent on the vehicle specification.

1. Rotate the bulb holder 45 degrees counter-clockwise.
2. Rotate to remove the bulb assembly from the lamp.
3. Push and twist to remove the bulb.