


## TOUCH SCREEN HOME MENU

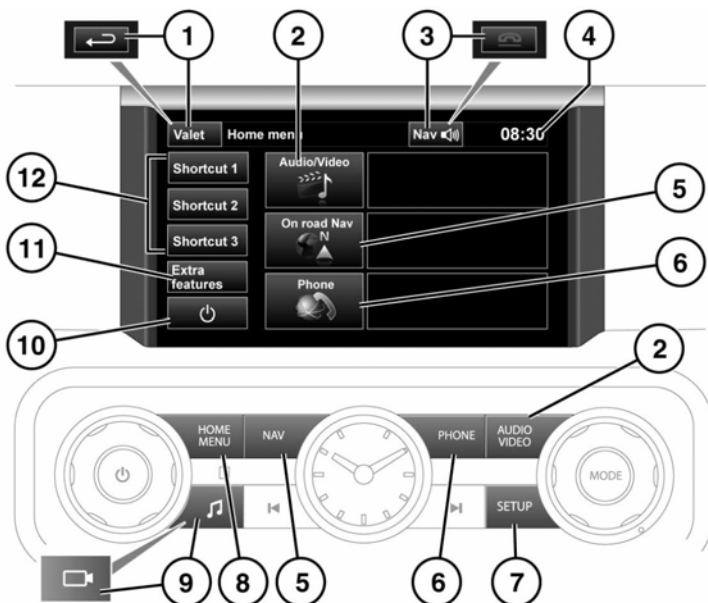

E155450

### ⚠ WARNING

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

### NOTICE

Always run the engine during prolonged use of the Touch screen. Prolonged use will cause the battery to discharge.

### NOTICE

Do not use excessive pressure when selecting items on the Touch screen.

### NOTICE

Avoid spilling or splashing liquids onto the Touch screen.

1. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
2. Touch or press to select the **Audio/Video** menu, see 118, **AUDIO/VIDEO CONTROLS**.
3. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
4. Touch to adjust the time/date.
5. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
6. Touch or press to select the **Phone** menu.
7. Touch to select the Touch screen **Setup** menu.