


Heating and ventilation

FRONT CLIMATE CONTROL

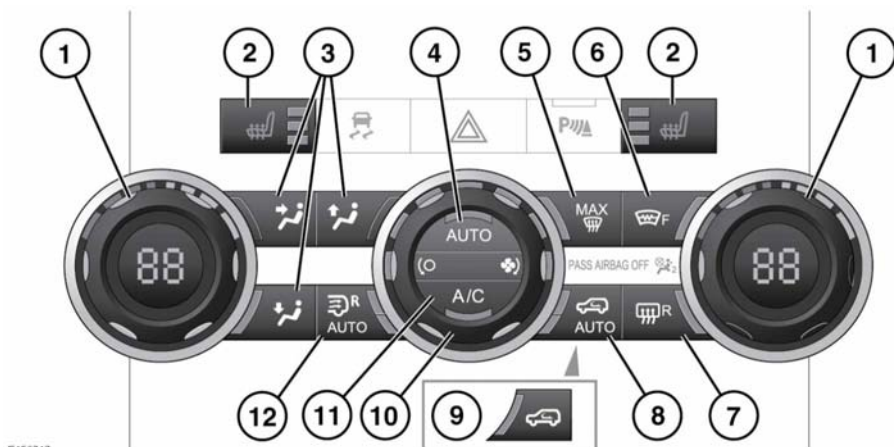

1. Temperature controls: Individual for driver/passenger settings.
2. Seat heaters:
 - Press once to turn on to high, twice to turn on to medium, three times to turn on to low and a fourth time to turn off.
3. Air distribution buttons:
 - Windshield and side window vents.
 - Face-level vents.
 - Foot-level vents.

Note: More than one setting may be selected, at a time, to achieve the desired distribution.
4. Auto mode: For fully automatic operation.
5. Maximum Defrost mode.
6. Heated front windshield: Will deactivate after a predetermined length of time.
7. Heated rear glass: Will deactivate after a predetermined length of time.

NOTICE

Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the glass.

8. Air quality sensor.
9. Recirculation.
10. Blower control:
 - Rotate to adjust the blower speed.
 - Rotate fully counter-clockwise to turn the Climate control system off.
11. Air conditioning on/off: With the air conditioning off, the system operates in Economy mode, improving fuel economy.

Note: Using the system without air conditioning for long periods can cause the windows to fog.
12. Rear environment:
 - Press once to control the rear heating and air conditioning using the front controls only. The lower amber lamp is illuminated.