


REAR LAMP BULB REPLACEMENT

Note: The turn signal lamp, stop lamp, and tail lamp are LED units, and cannot be serviced.

Follow the steps illustrated. Insert a new bulb and refit the components.

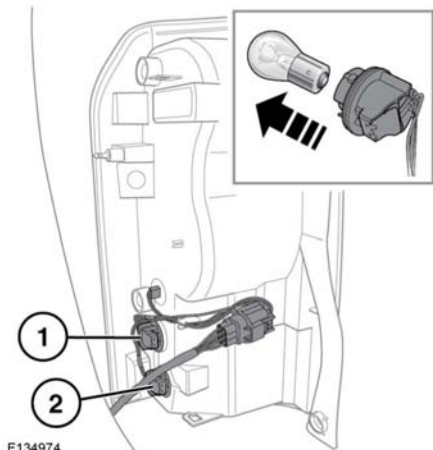

1. Reversing lamp.
2. Rear fog lamp.

Twist the relevant bulb unit and pull to access the bulb. Push, twist, and pull to remove the bulb.

LICENSE PLATE LAMP BULB REPLACEMENT

