

Move the Transfer gear switch towards **Lo** range (2) button and release. The range change status will be confirmed after several seconds.

Indication of the range change status will be displayed in the Message center.

Once complete, select Drive (**D**).

RANGE CHANGE INDICATORS

While the **Hi** range transmission is in use, no range indicators are illuminated. See **54, LOW RANGE (GREEN)**.

While a range change is in progress, the range indicator lamps will flash as follows:

Hi to Lo change:

- The **Lo** range warning lamp and indicator flash during the change and then illuminate constantly.
- The message **LOW RANGE SELECTED** is briefly displayed in the Message center.

Lo to Hi change:

- The **Lo** range lamps flash during the change.
- The **Lo** range indicator lamps extinguish when the change is complete.
- The message **HIGH RANGE SELECTED** is briefly displayed in the Message center.

RANGE CHANGING ON THE MOVE

The recommended method of changing range is with the vehicle stationary. For experienced off-road drivers, a change from **Lo** to **Hi** while on the move can be accomplished, as detailed below.

Note: Changing from **Hi** to **Lo** can be performed only with the vehicle stationary.

CHANGING FROM LOW TO HIGH RANGE

With the vehicle traveling no faster than 38 mph (60 km/h), select Neutral (**N**). Press the front of the transfer gear switch (1) to the **Hi** position and release it.