


Note: The center seat back should always be raised last.

1. Pull the strap (3) at the front of the cushion.
2. Grasp the top and bottom of the seat back, lift the seat and return it to the table fold position.
3. Pull the release lever (1) forwards.
4. Pull the seat back up and push into place. When fully home, the latching mechanism will click.

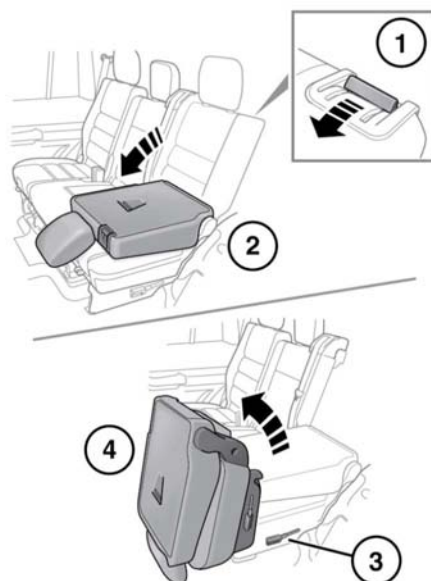

ACCESS POSITION (7 seat vehicle)

⚠ WARNING

The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the seat back to fall forwards suddenly, causing injury.

To access the third row of seats by this method, the head restraint on the second row seat must first be fully lowered.

E134918

1. Pull the seat back release lever forwards.
2. Lower the seat back into the table fold position.
3. Pull the access lever on the side of the seat.
4. Tilt the seat forwards.

To return the seat to the upright position, lower the seat until the access lever re-engages, then pull the seat back release lever and return the seat back to the upright position.

Note: A second row seat cannot be moved directly from the loadspace position to the access position. The seat back must first be returned to the table fold position.

⚠ WARNING

When returning the seat from the access position, make sure the area under the seat is clear from obstructions that may prevent the seat from locking securely in place.